


# Assembly Instructions

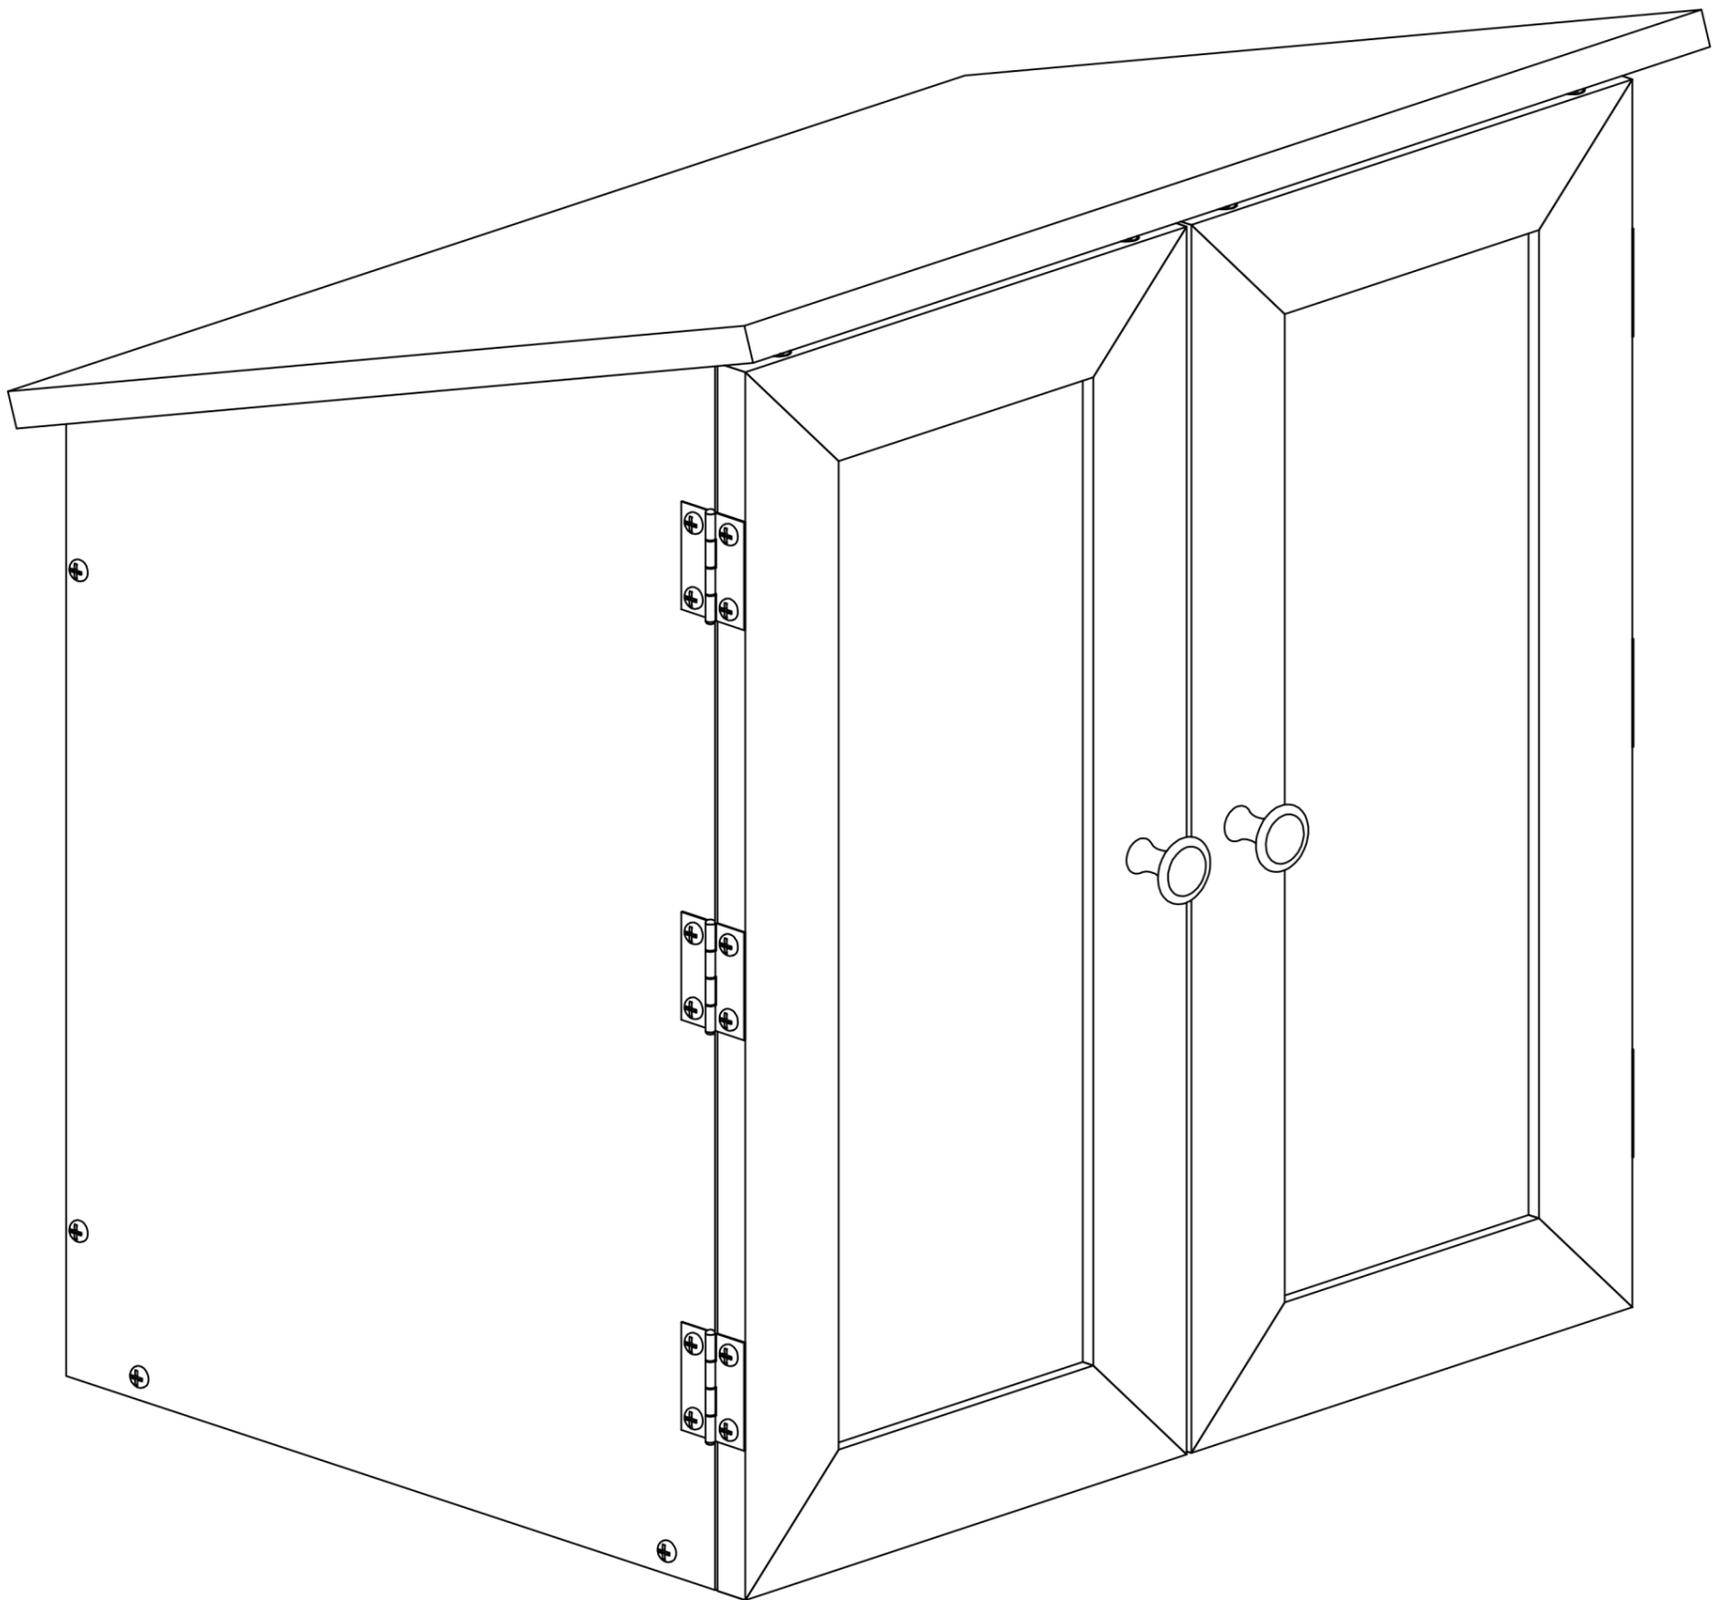


SYLBRAY

*Share the joy of reading*

# Assembling

## Estimated time for assembly

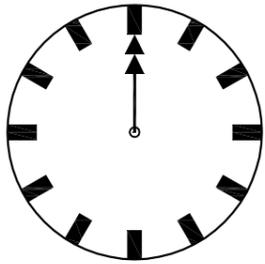

30 MIN

APPROXIMATE  
ASSEMBLY TIME

## Optional installation methods




Method 1 : Pole mounting installation

Method 2 : Wall mounted installation

















---

## What you need

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools:Phillips screwdriver and hammer
- ✓ Caution:If using a power drill or power screwdriver for screwing,please be careful to slow down and stop when the screw is tight.Failure to do so may strip the screw head. (Assembly can be faster with an electric screwdriver.)

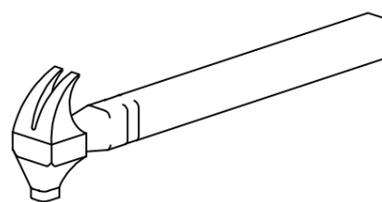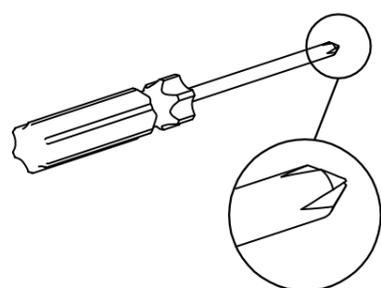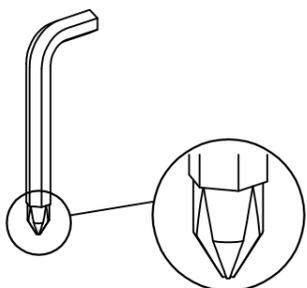



# The Hardware

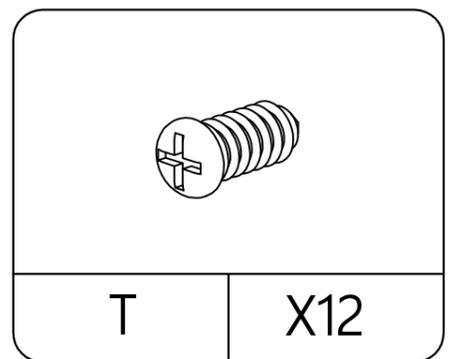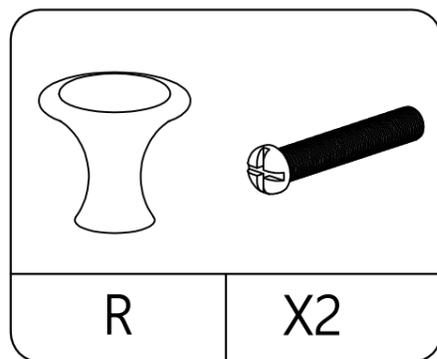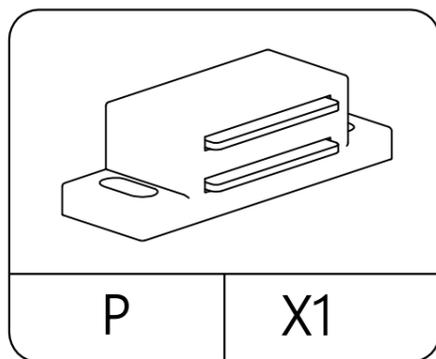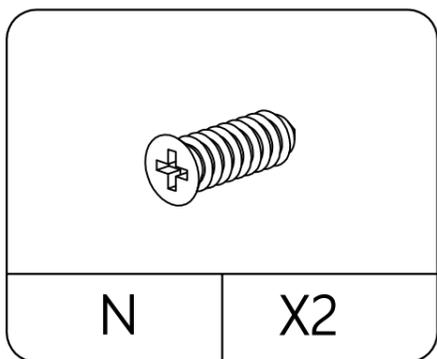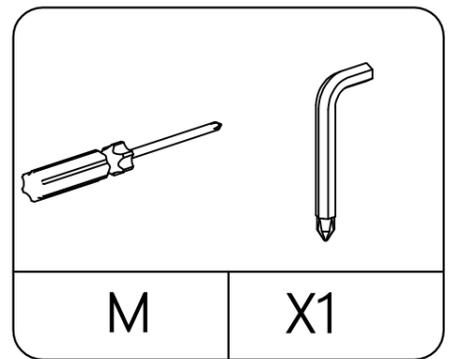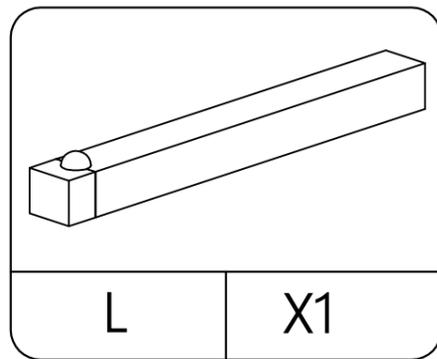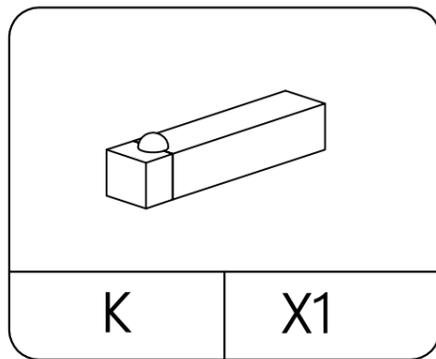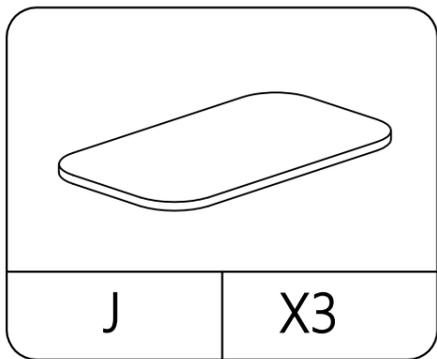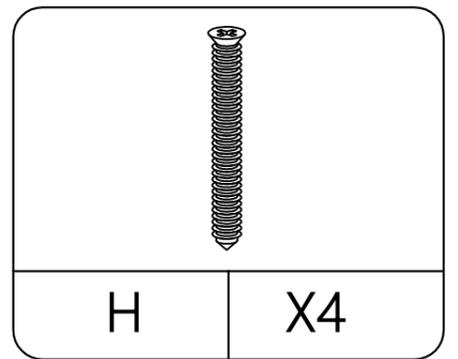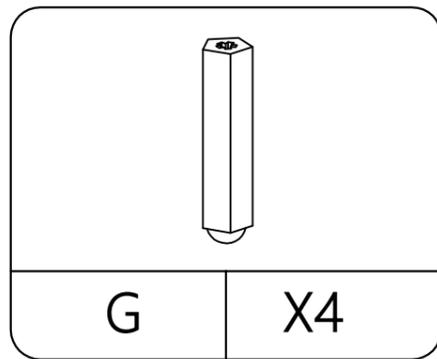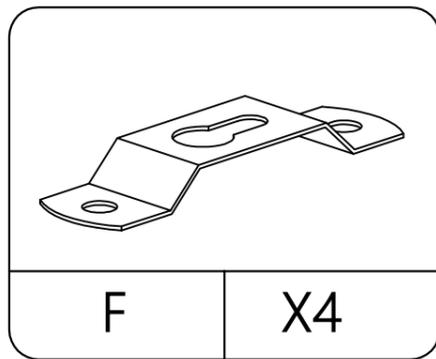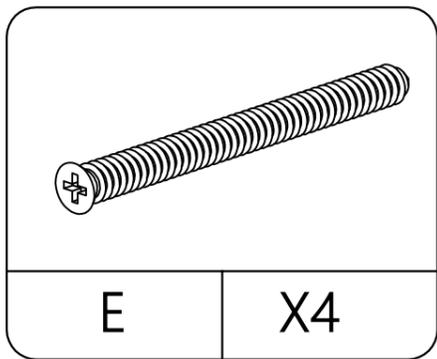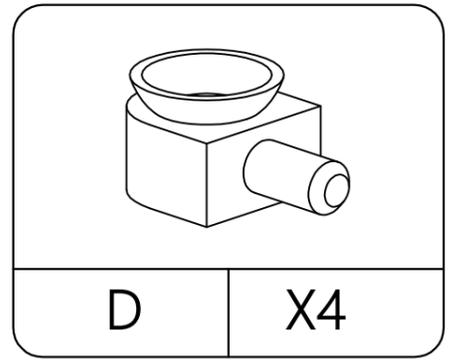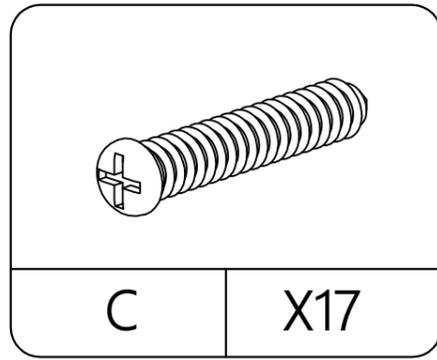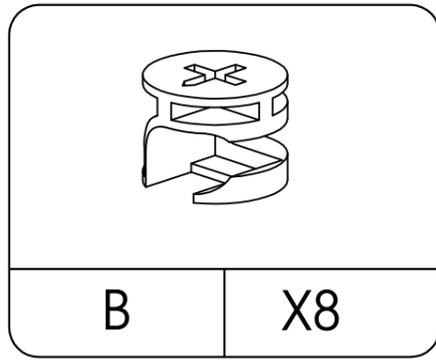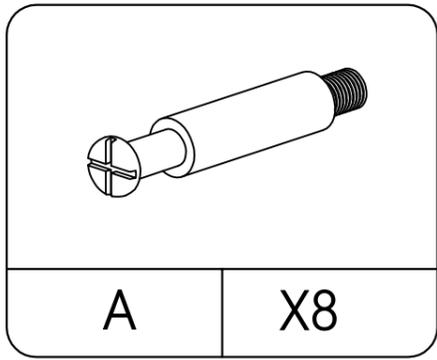

## Cam Lock Fastening System






Insert the cam bolt into the hole first, then insert the cam lock and lock it.

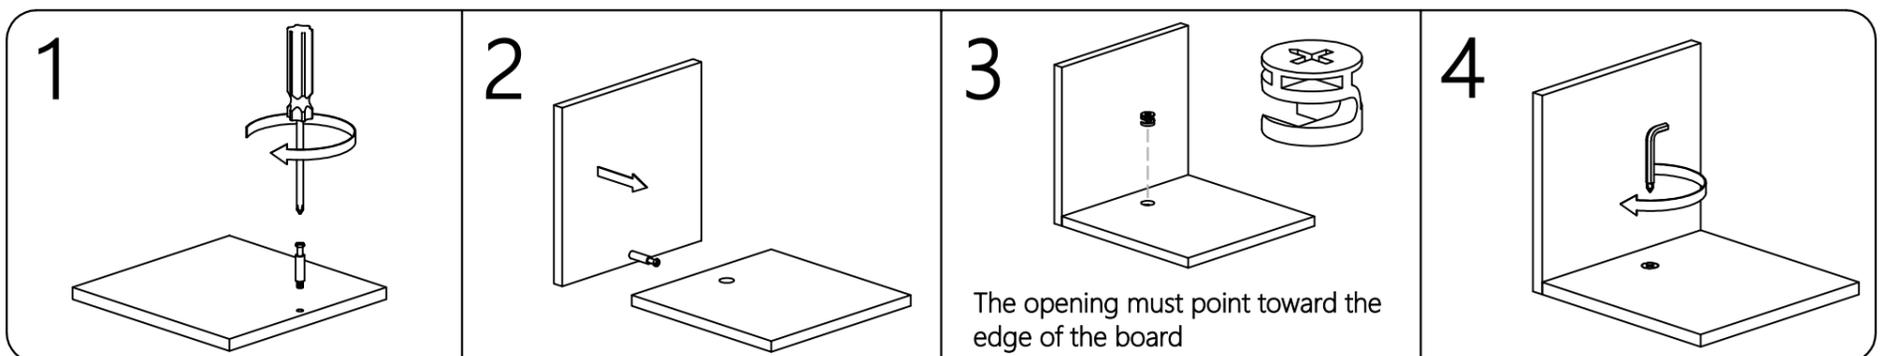

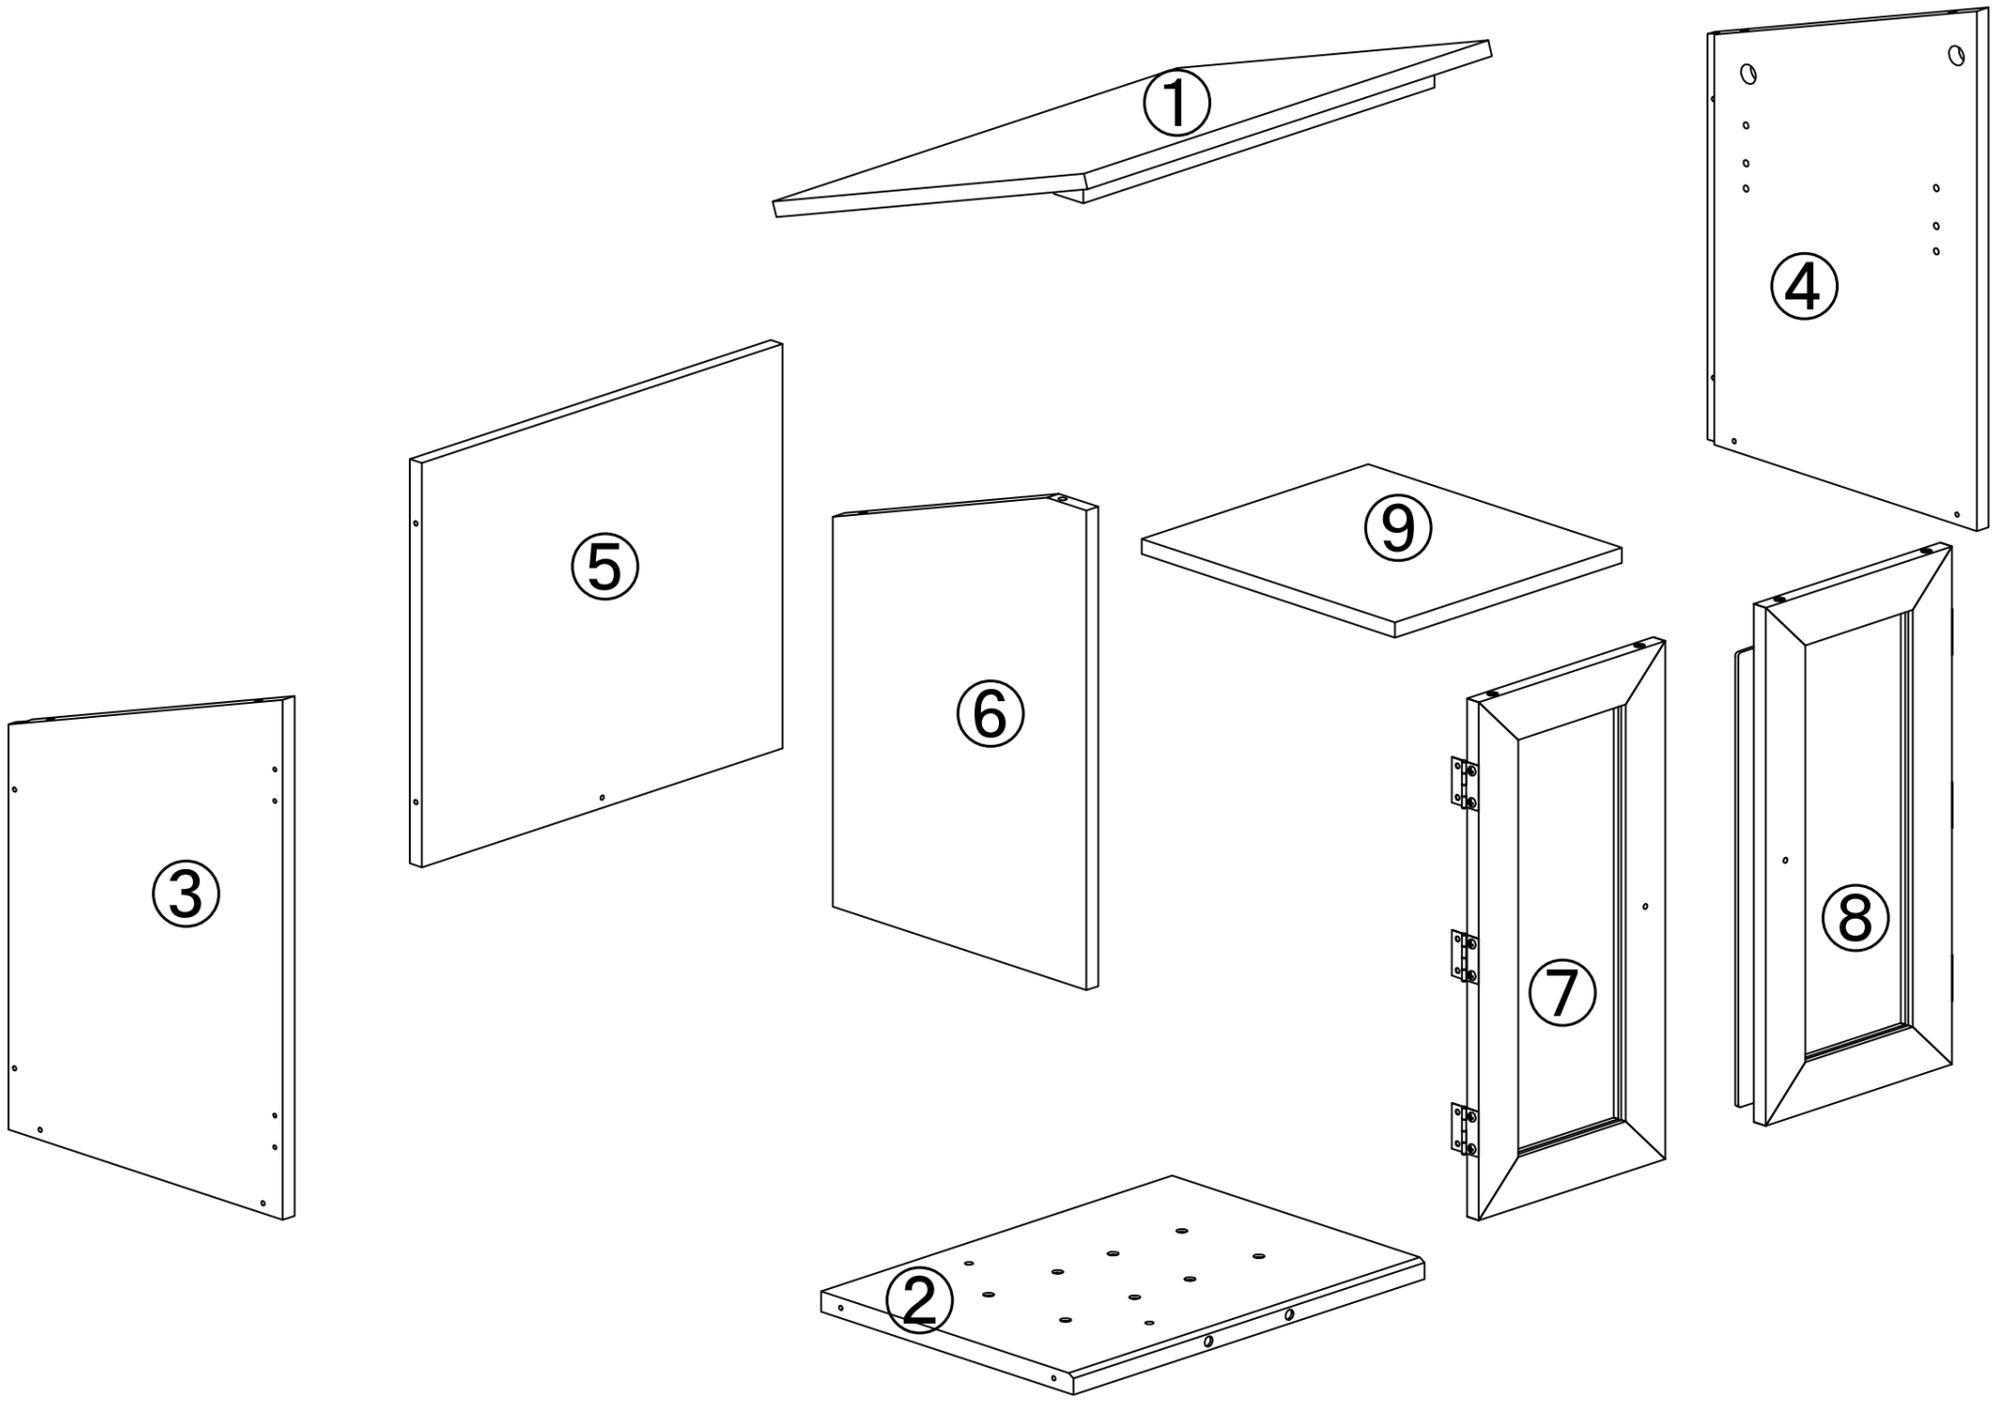


Number	①	②	③	④	⑤	⑥	⑦	⑧	⑨
Quantity	1	1	1	1	1	1	1	1	1




# STEP 1

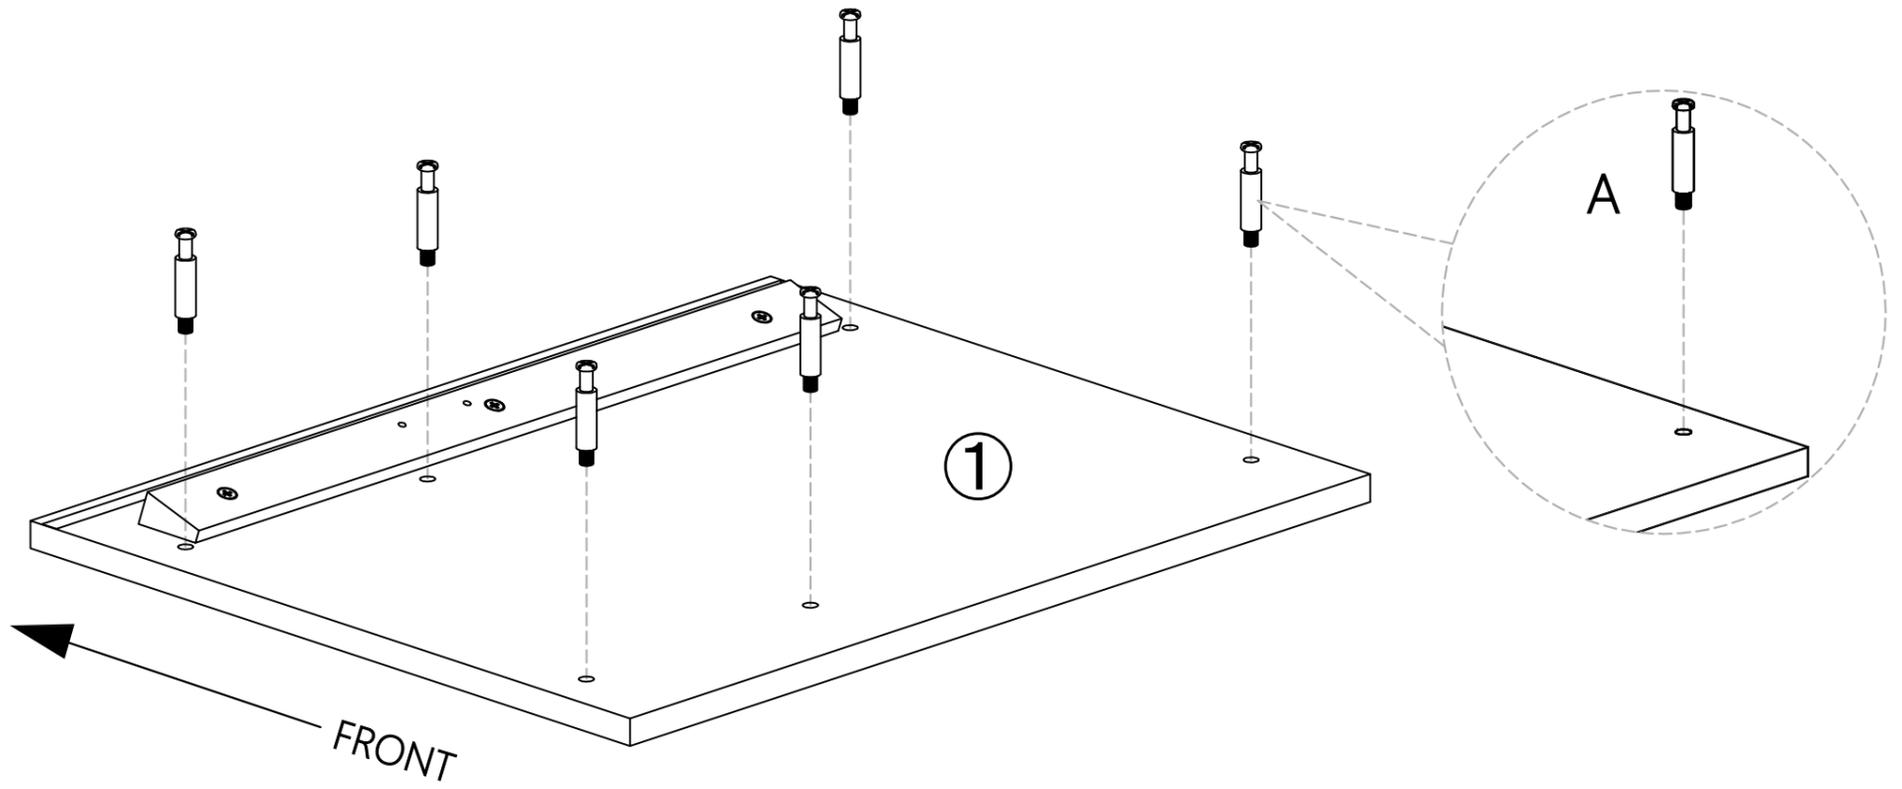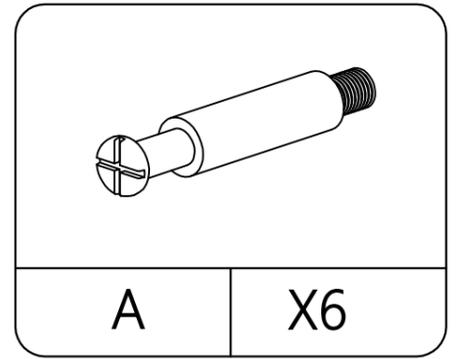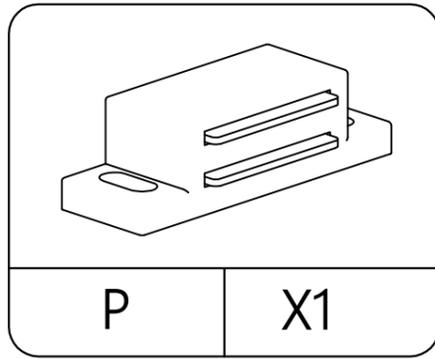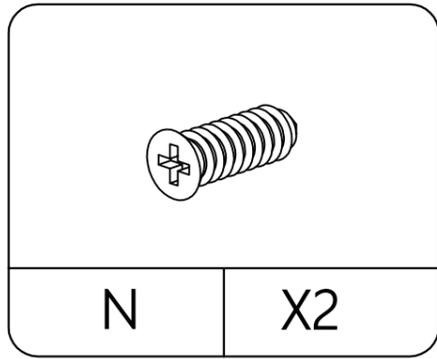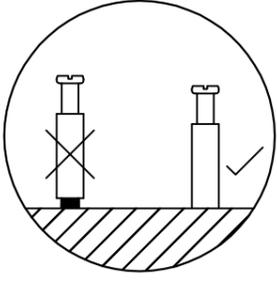

# STEP 2


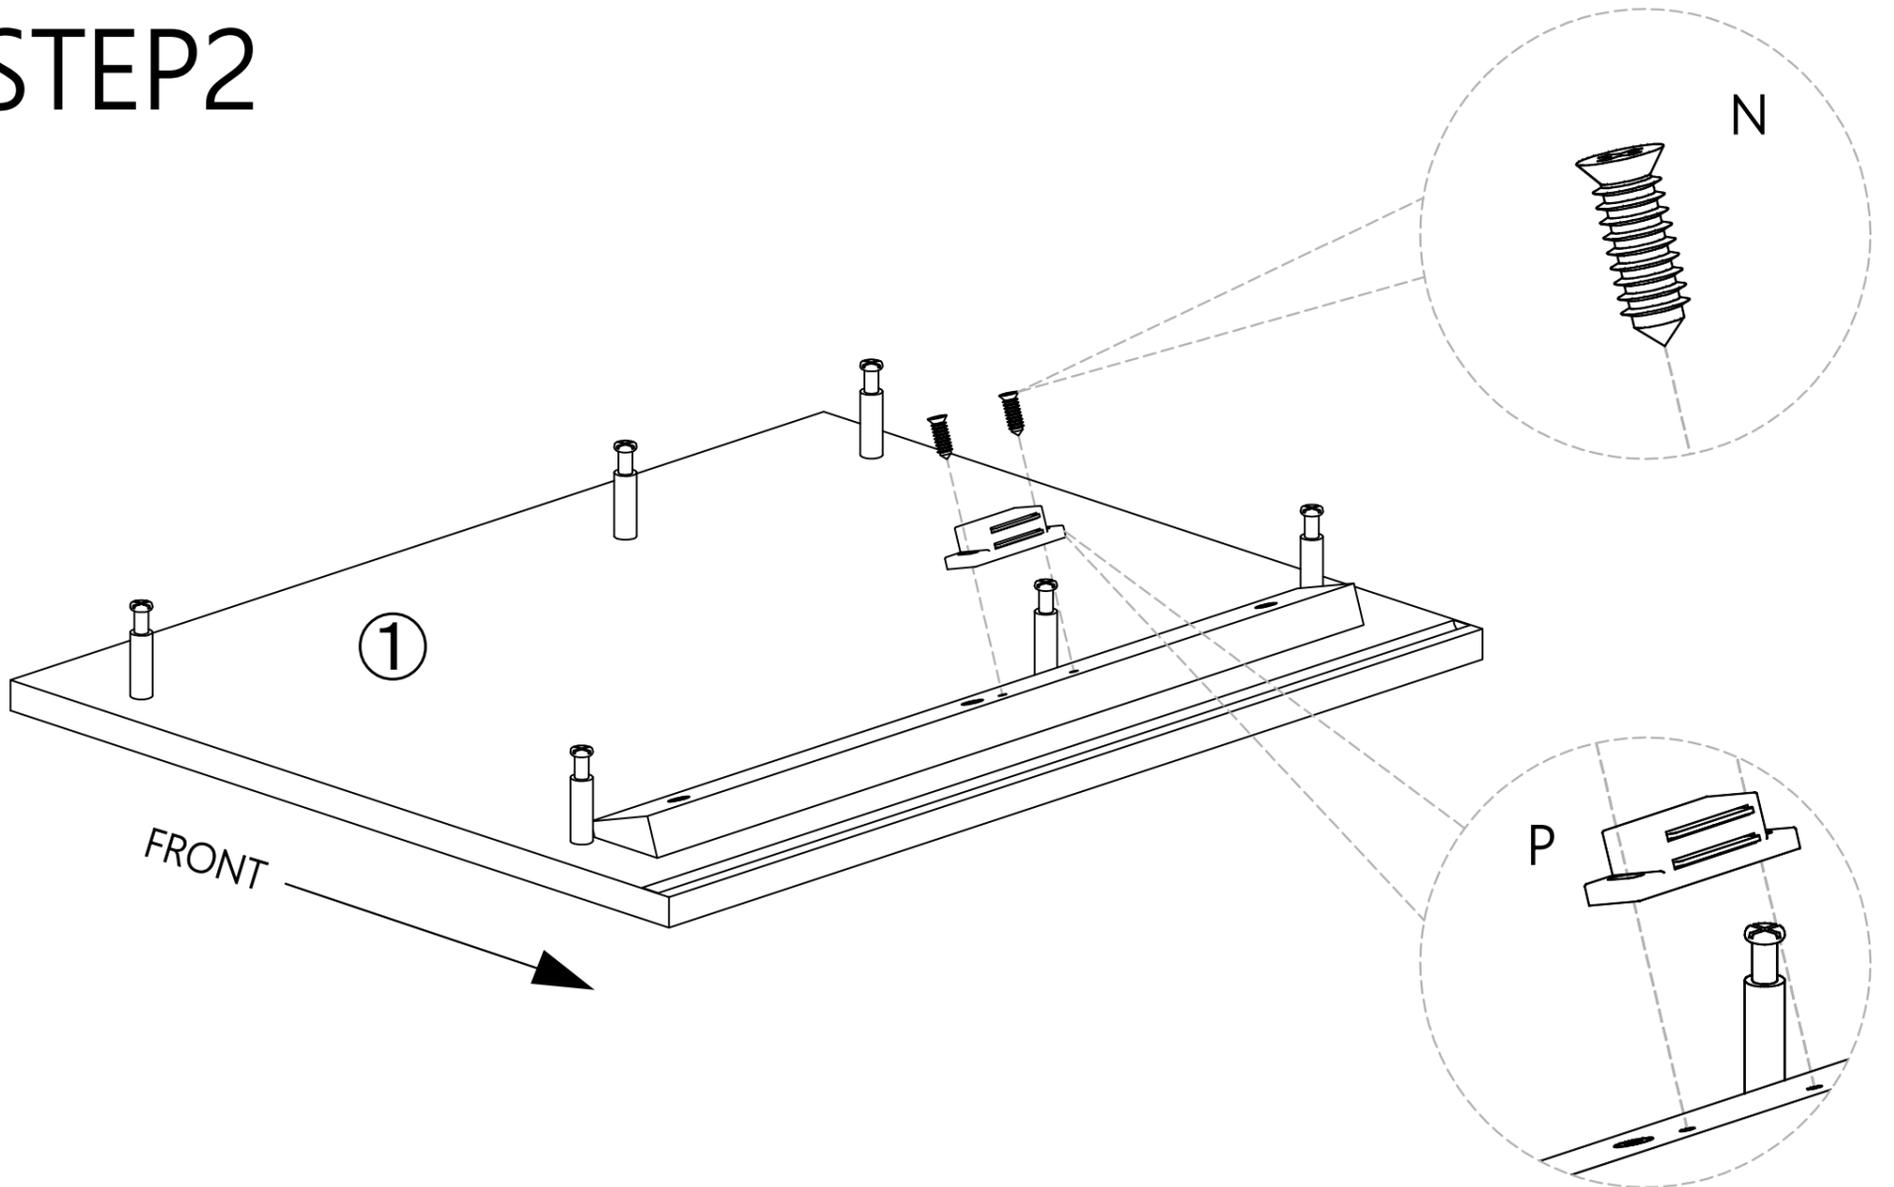


# STEP 3

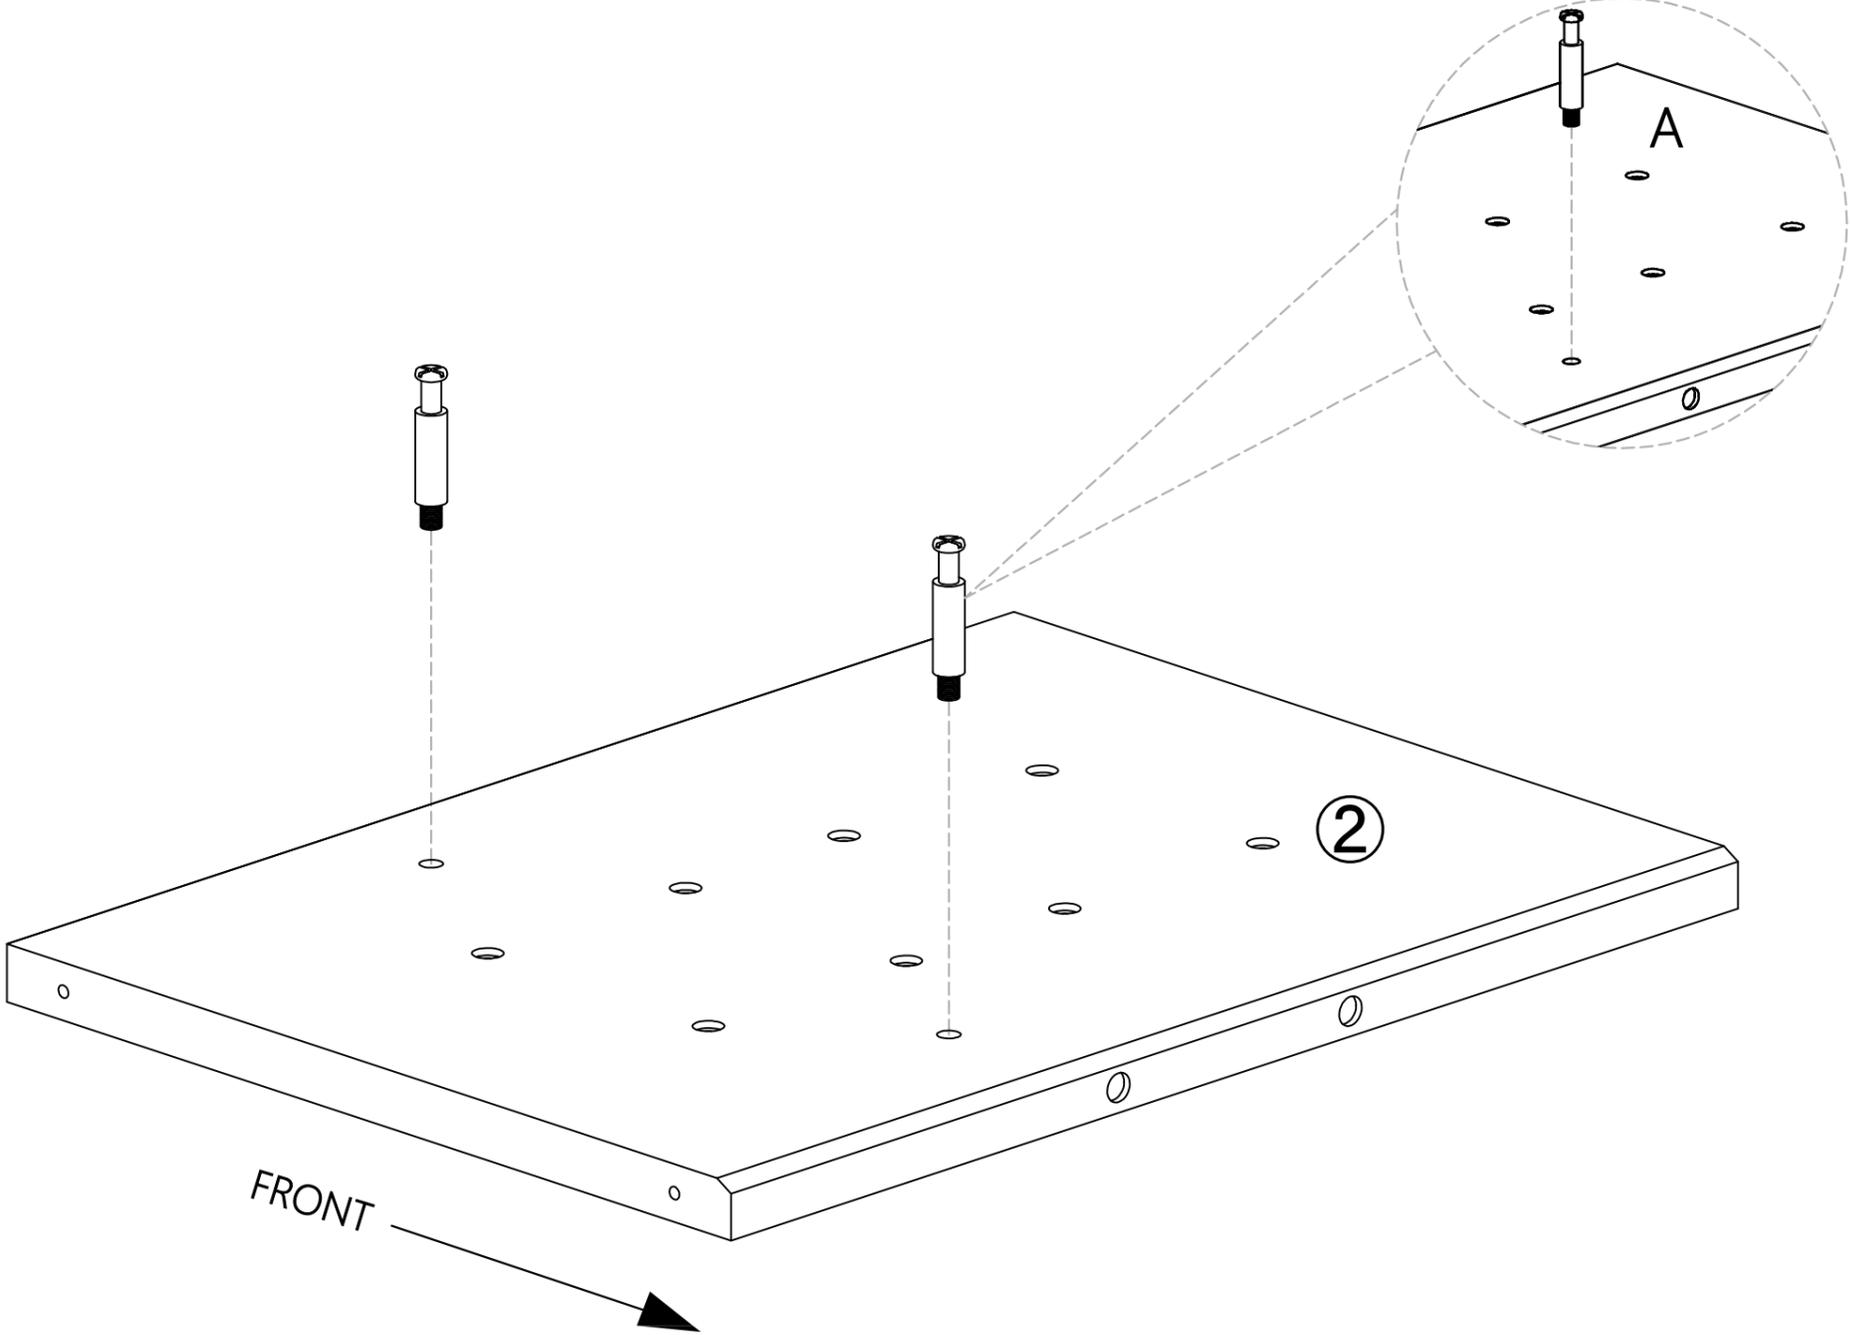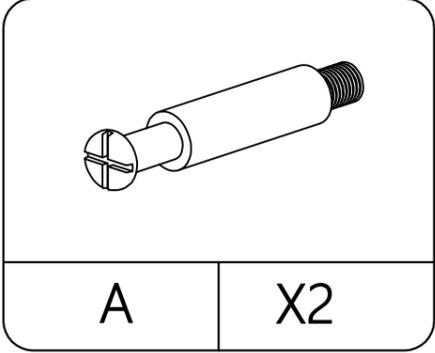
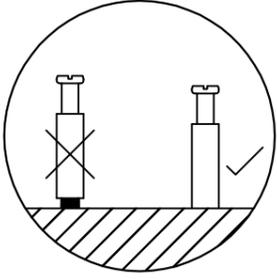


# STEP 4


Pole mounting can be done now or after full assembly. ( If you choose the wall-mounting method, skip this page .)

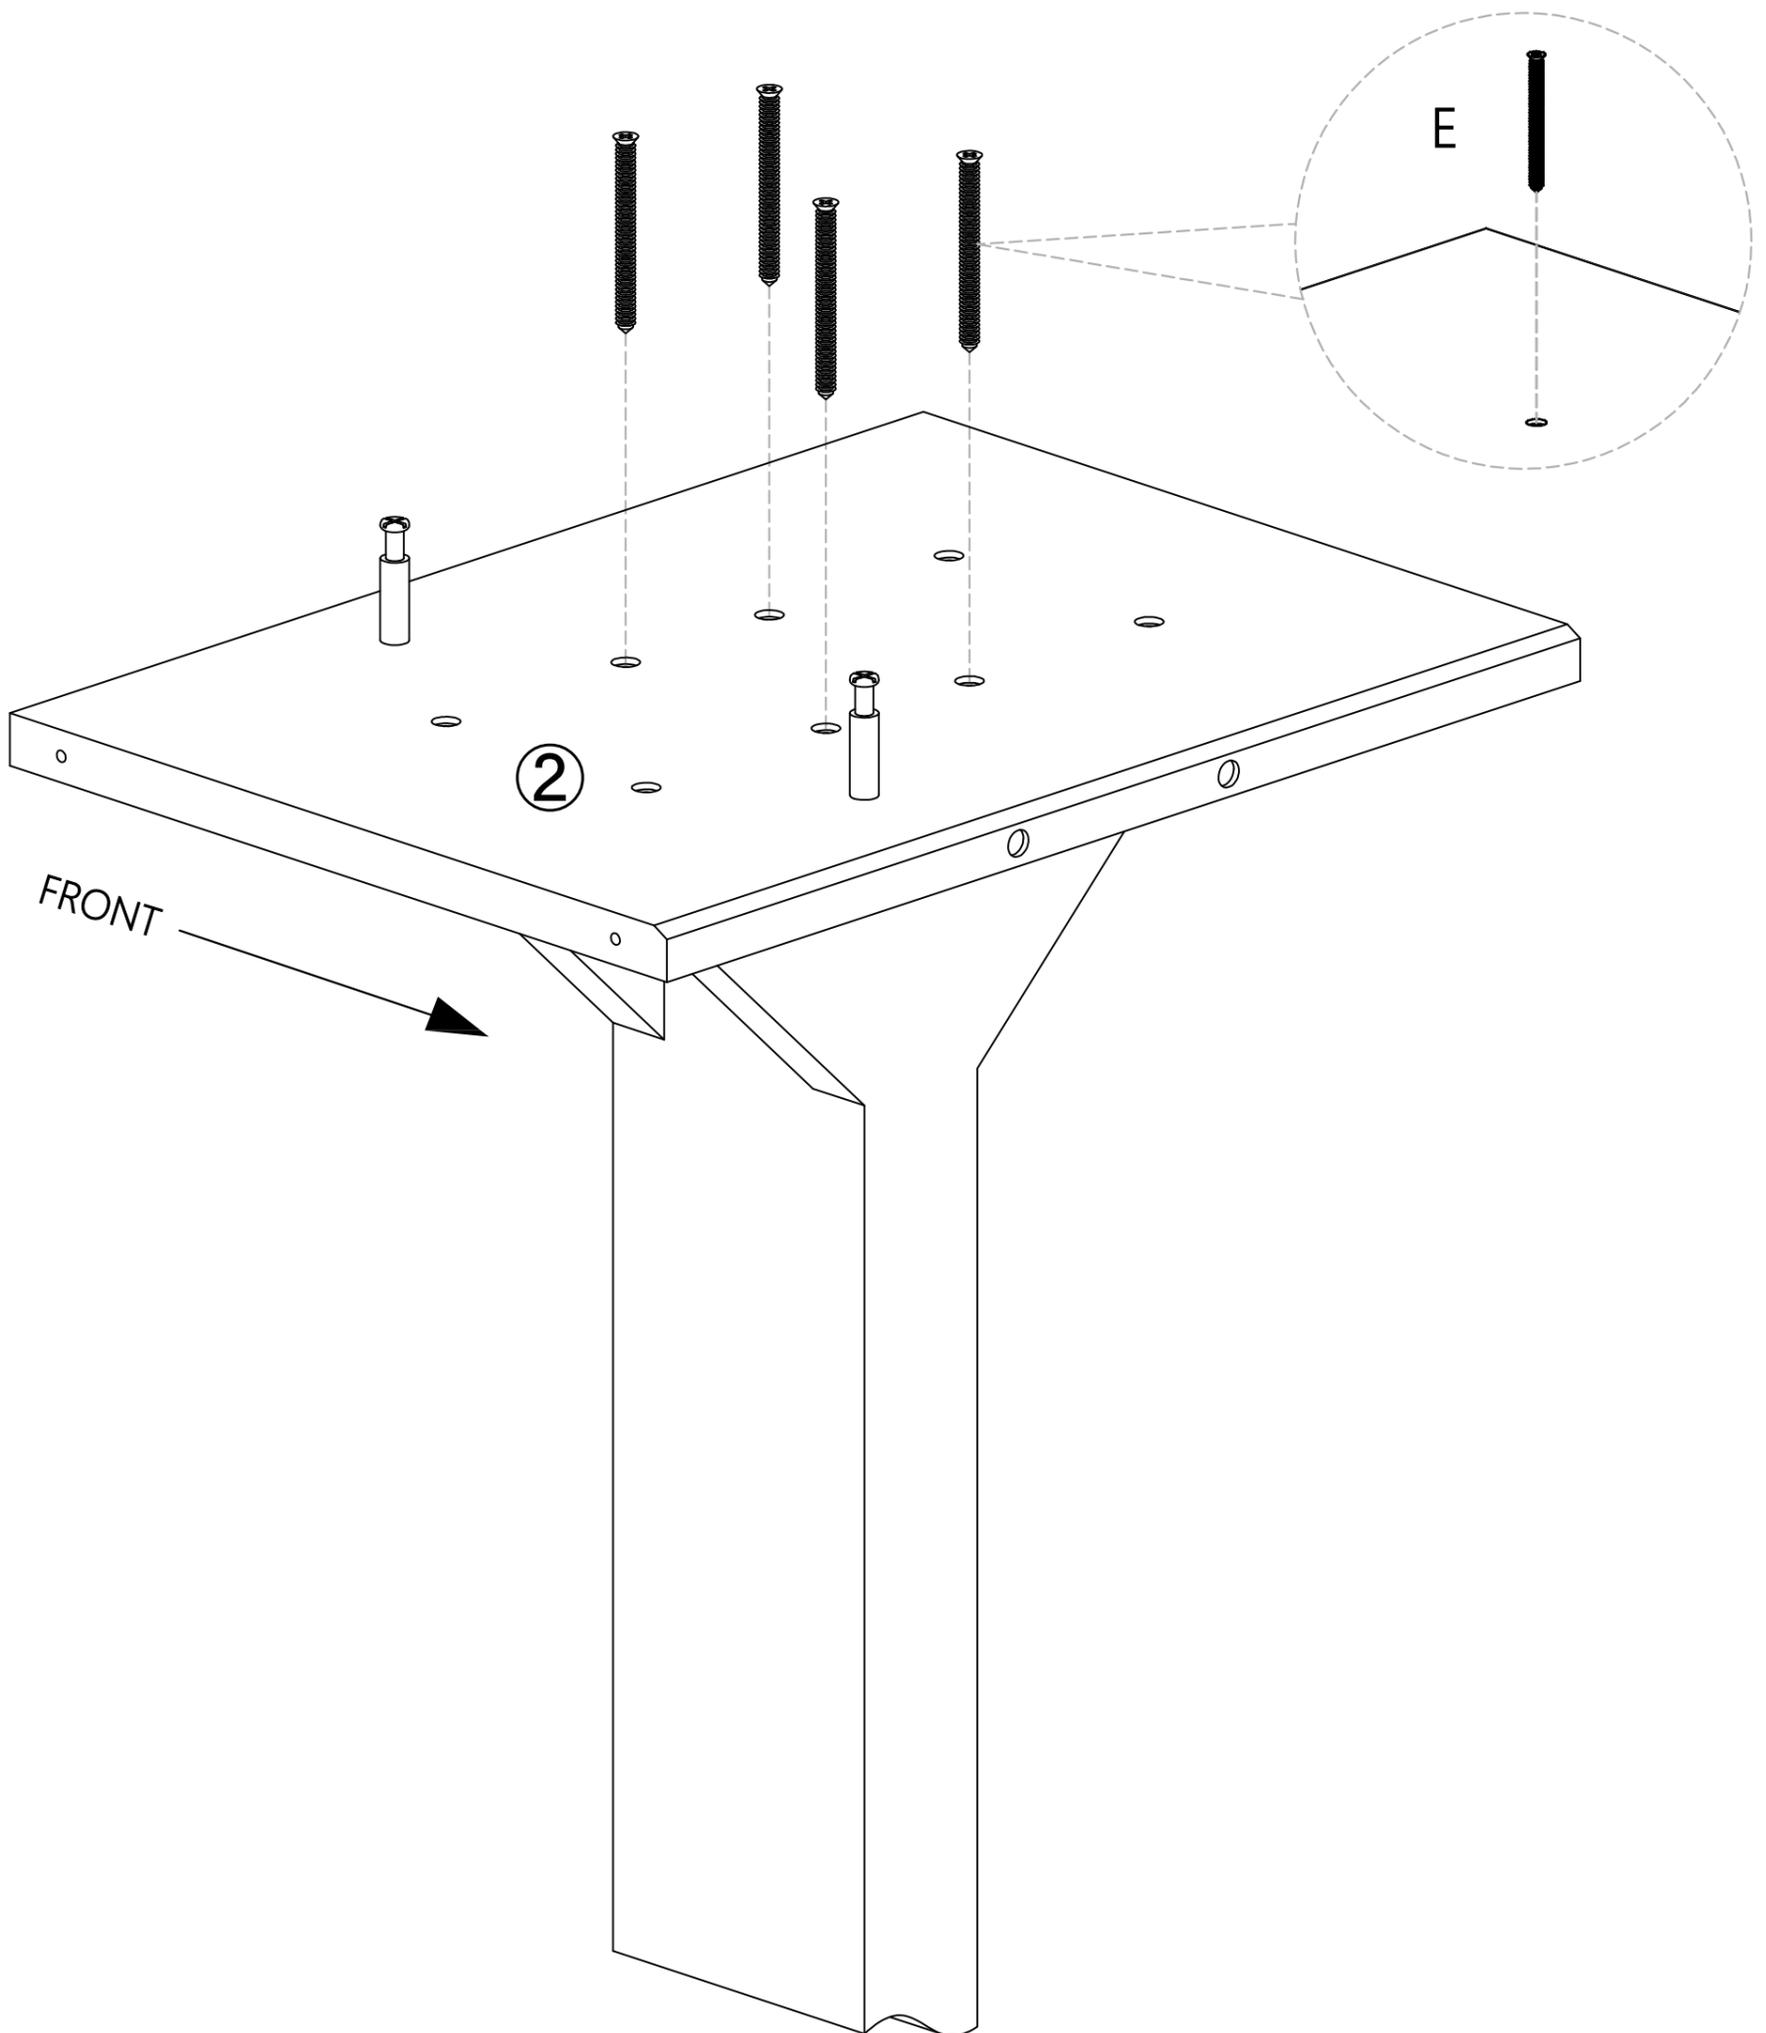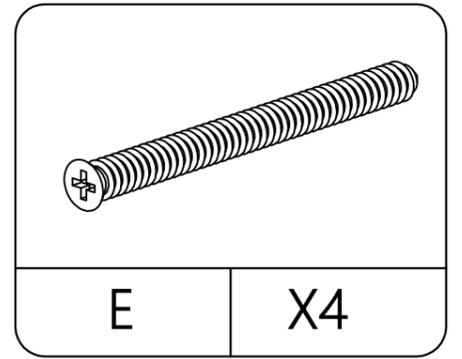



# STEP 5

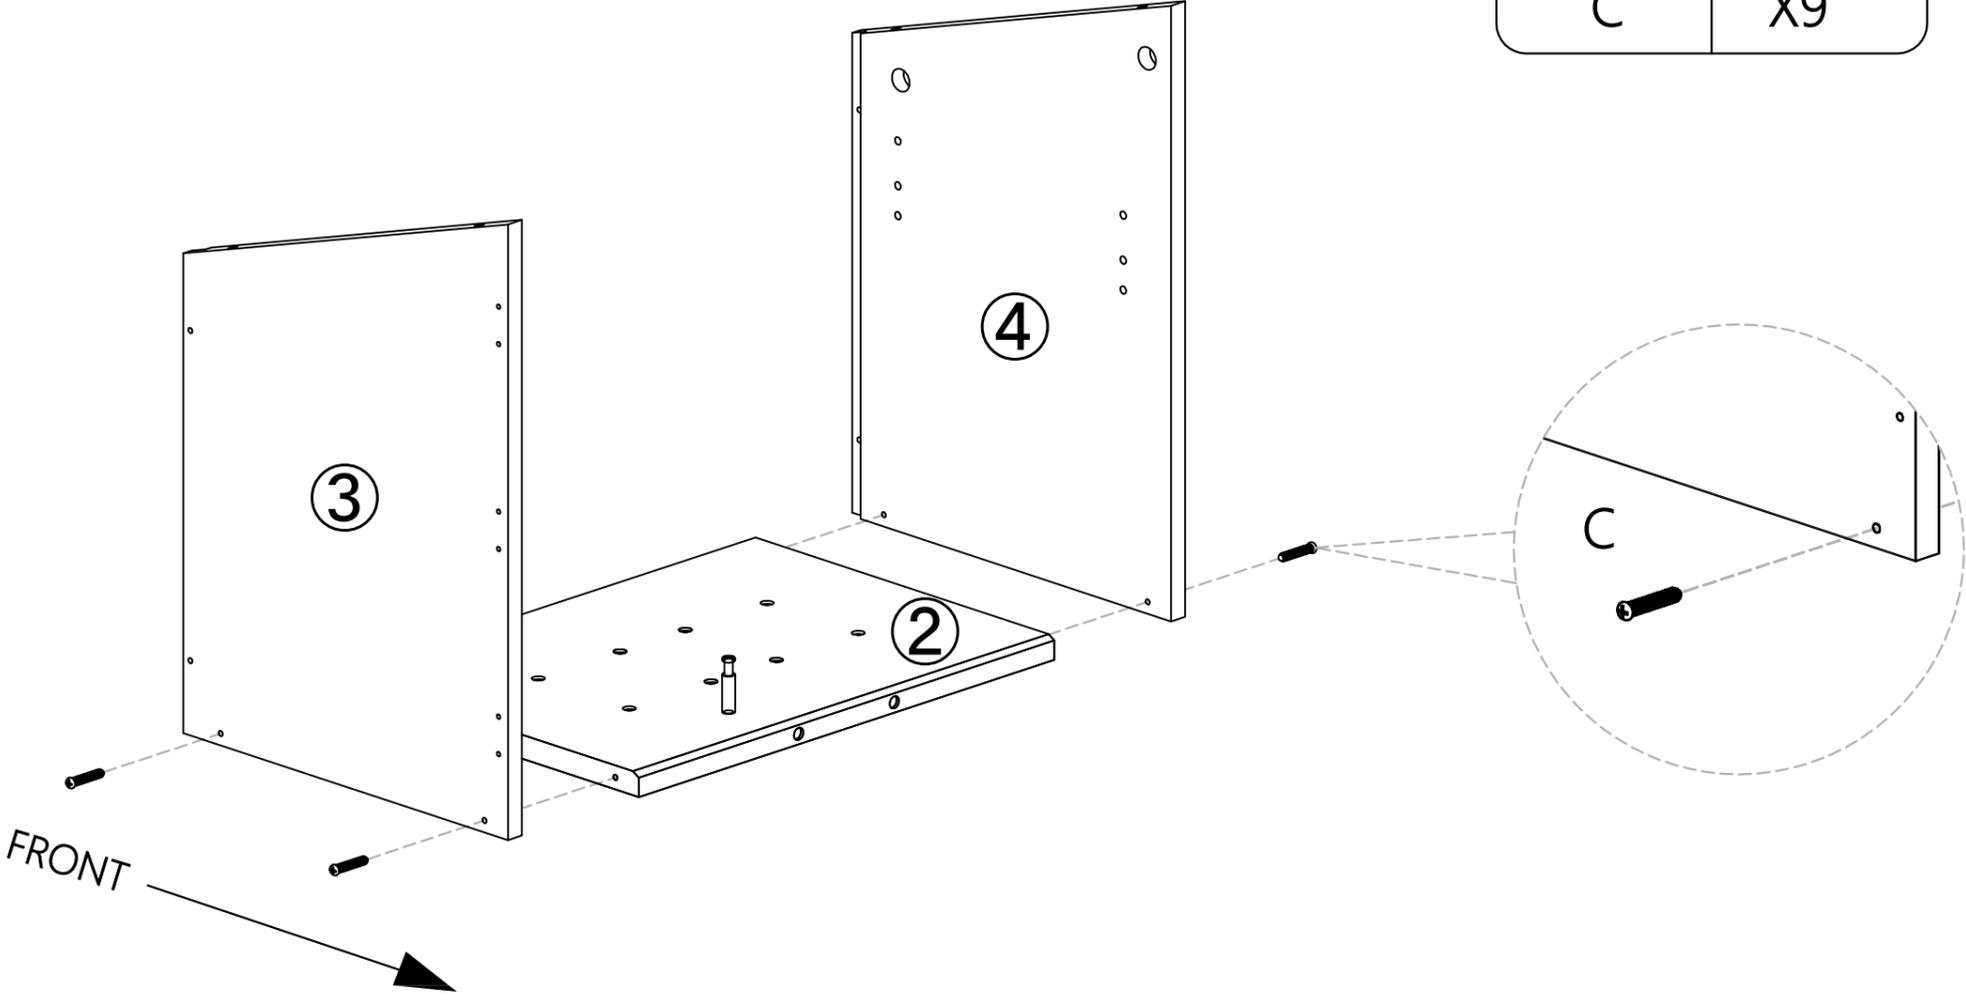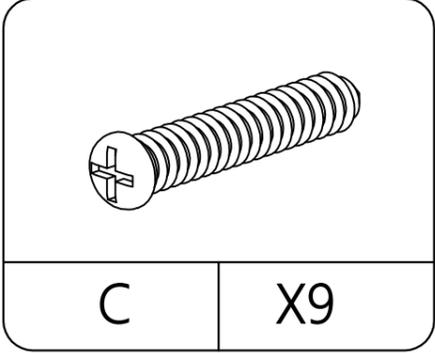





# STEP 6

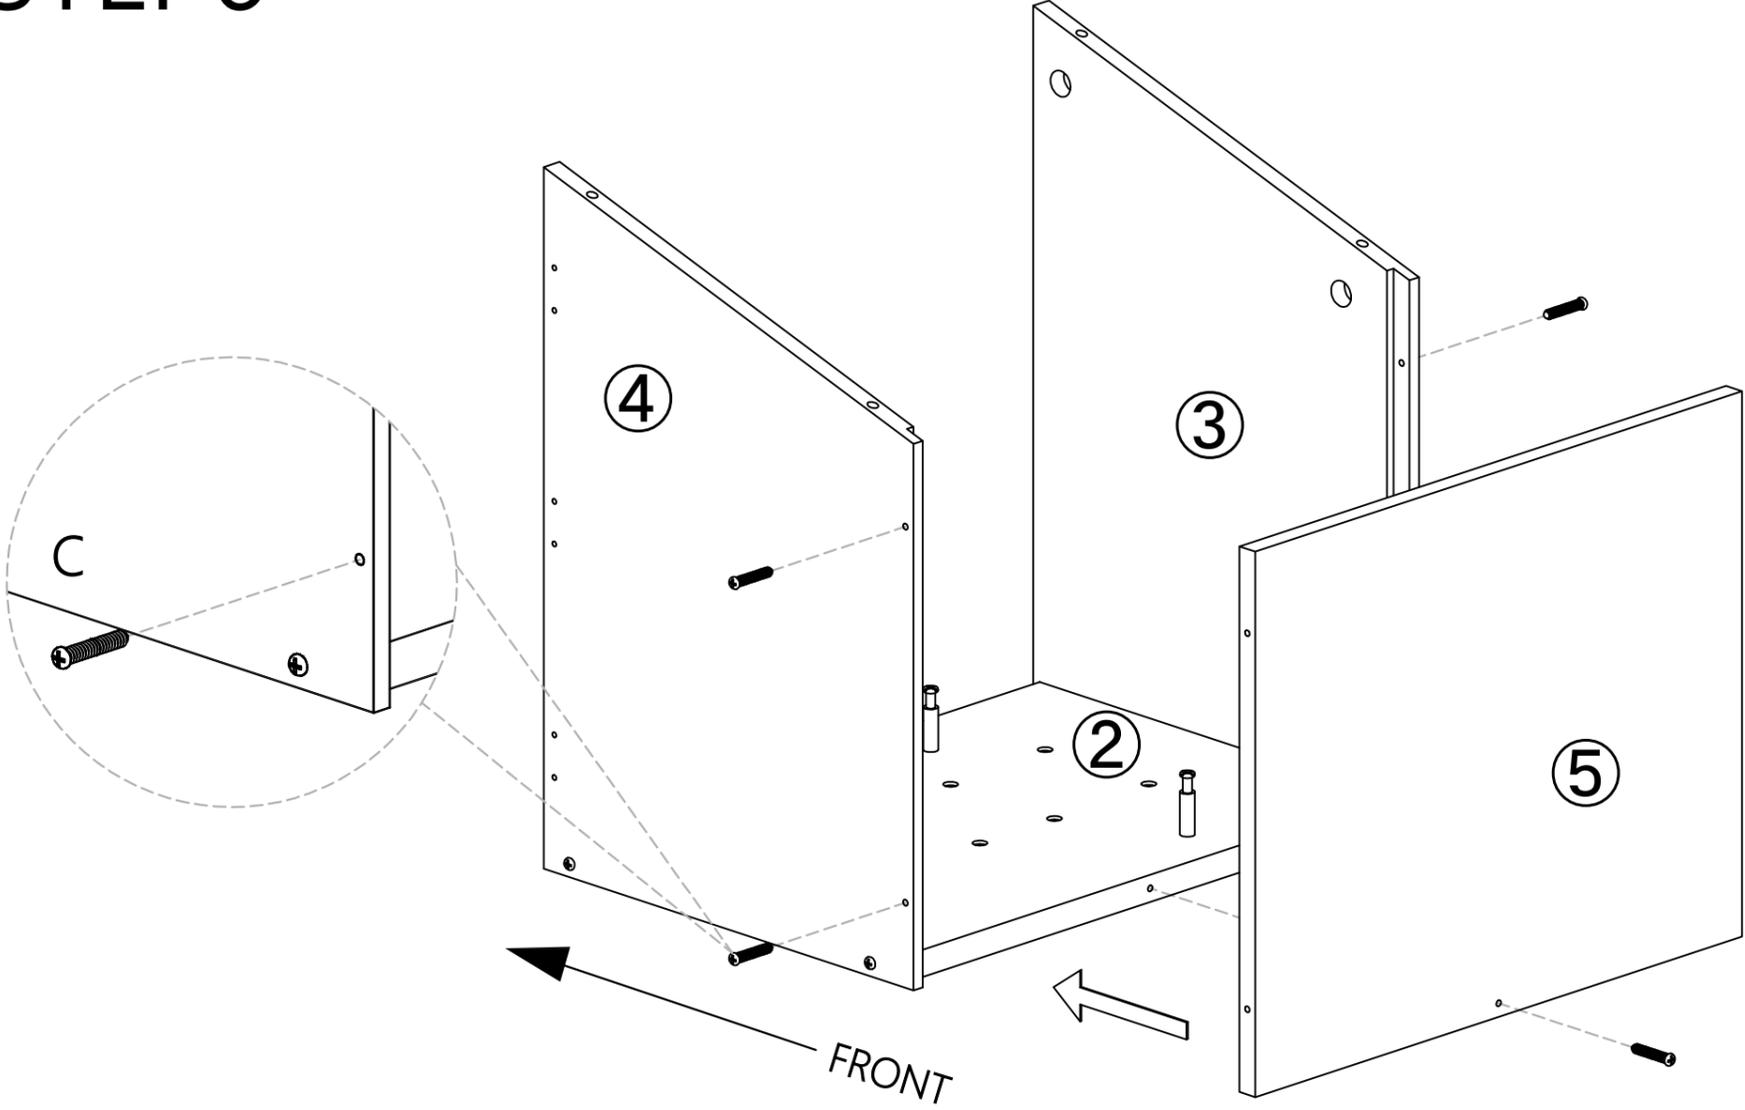

# STEP 7

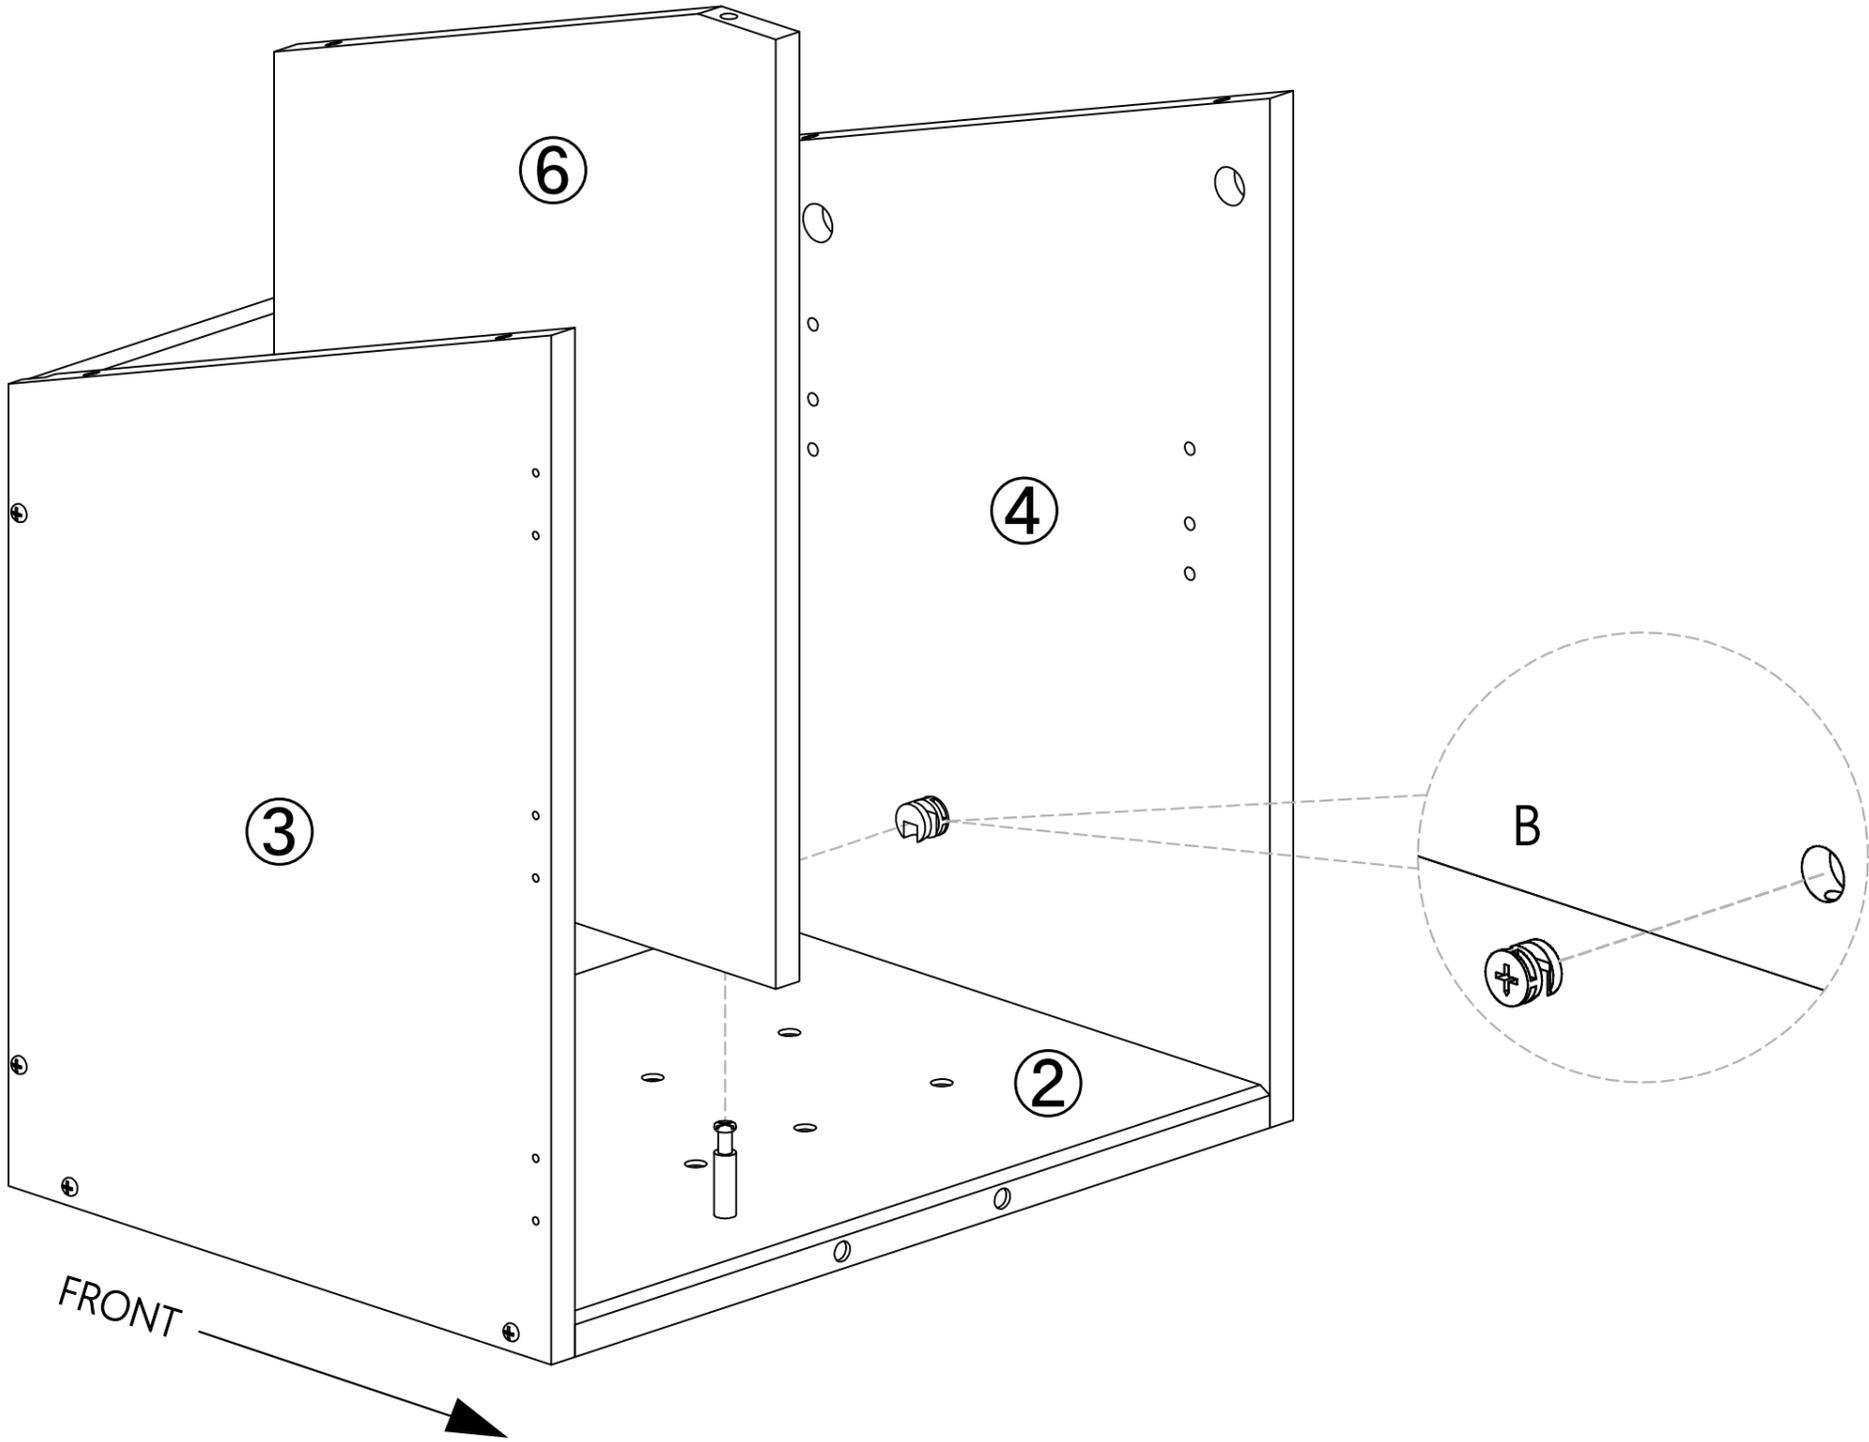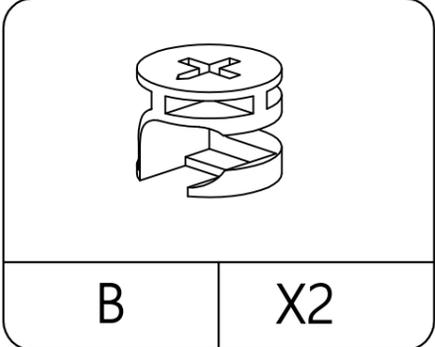


# STEP 8

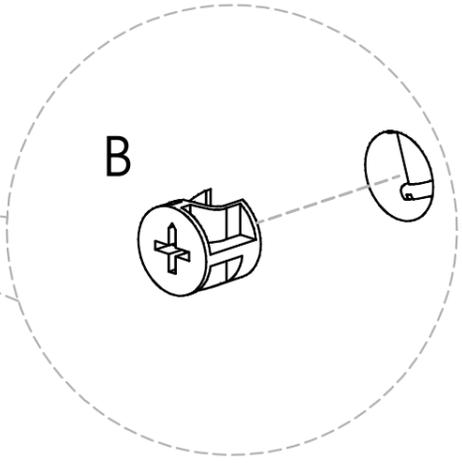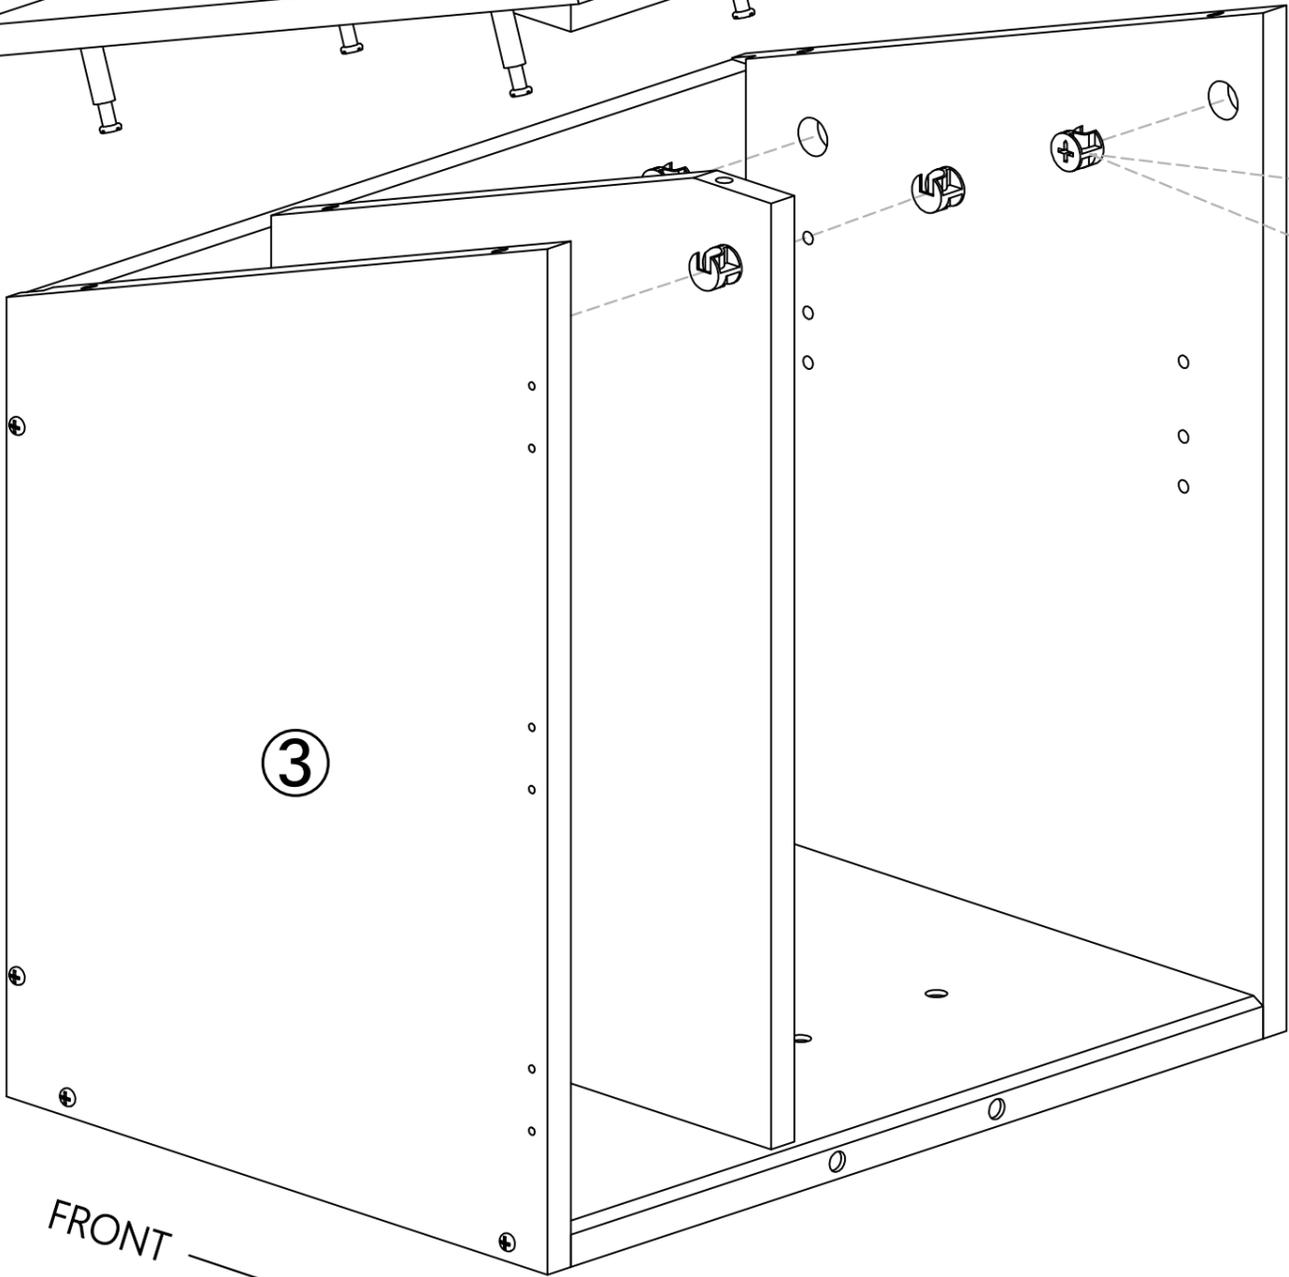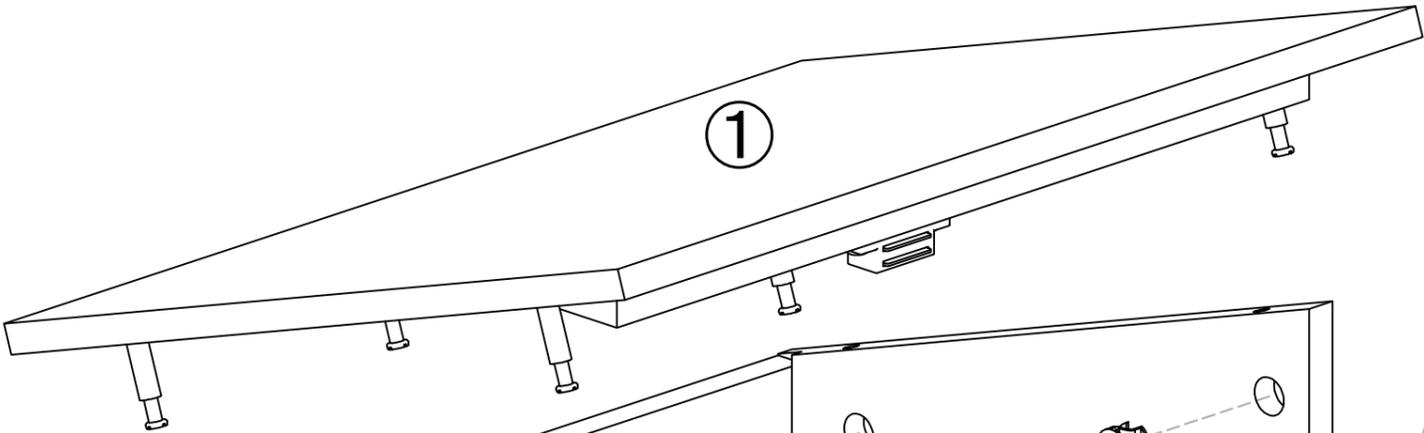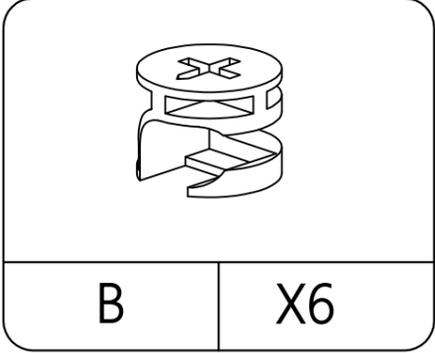


FRONT






# STEP 9

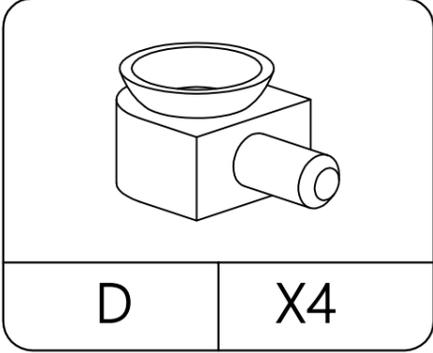






Adjustable in  
3 heights.

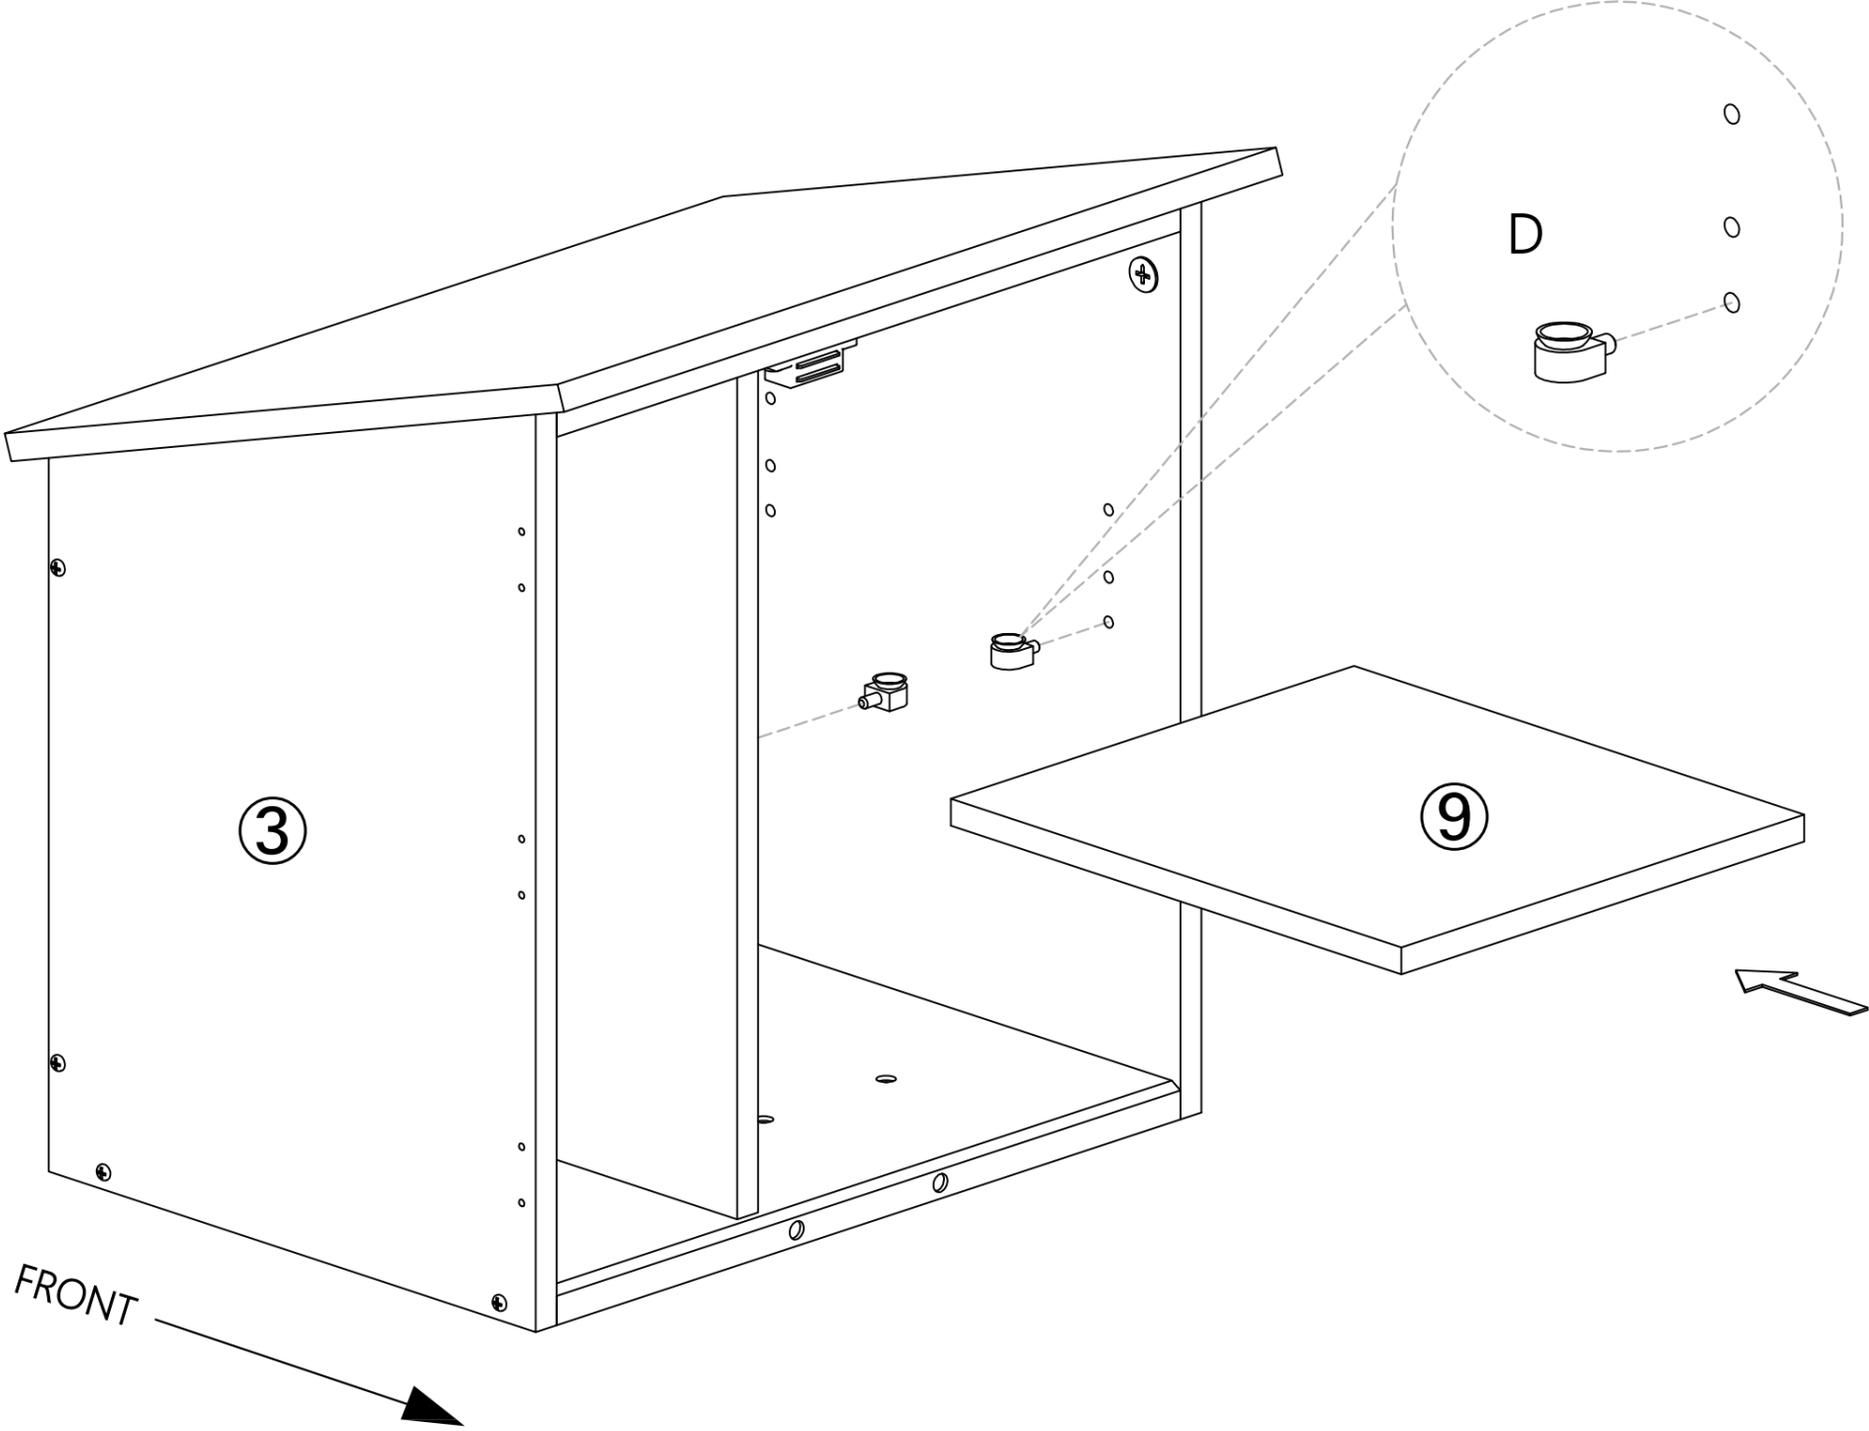




# STEP 10

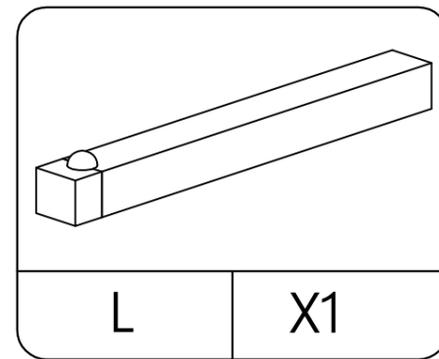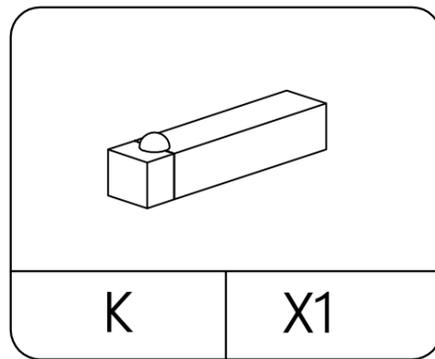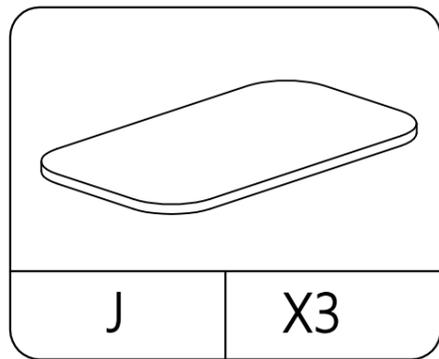





Be sure to stick the magnets directly against the wooden piece.

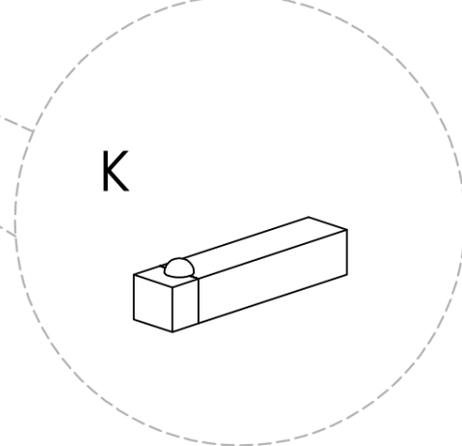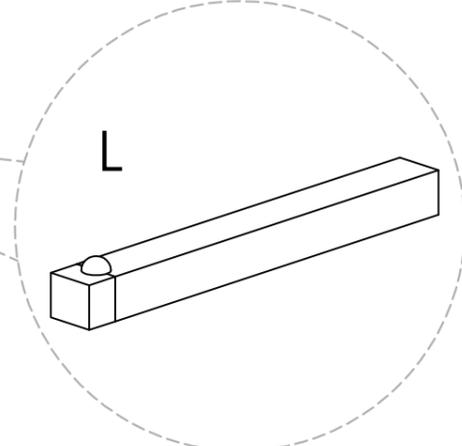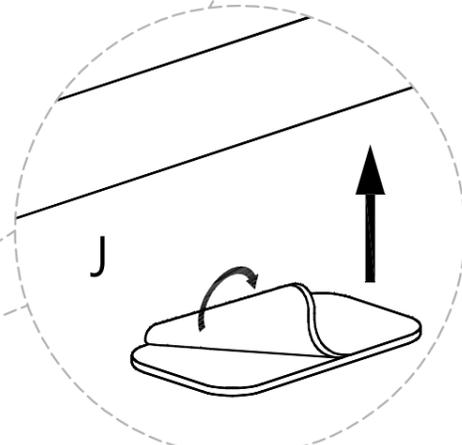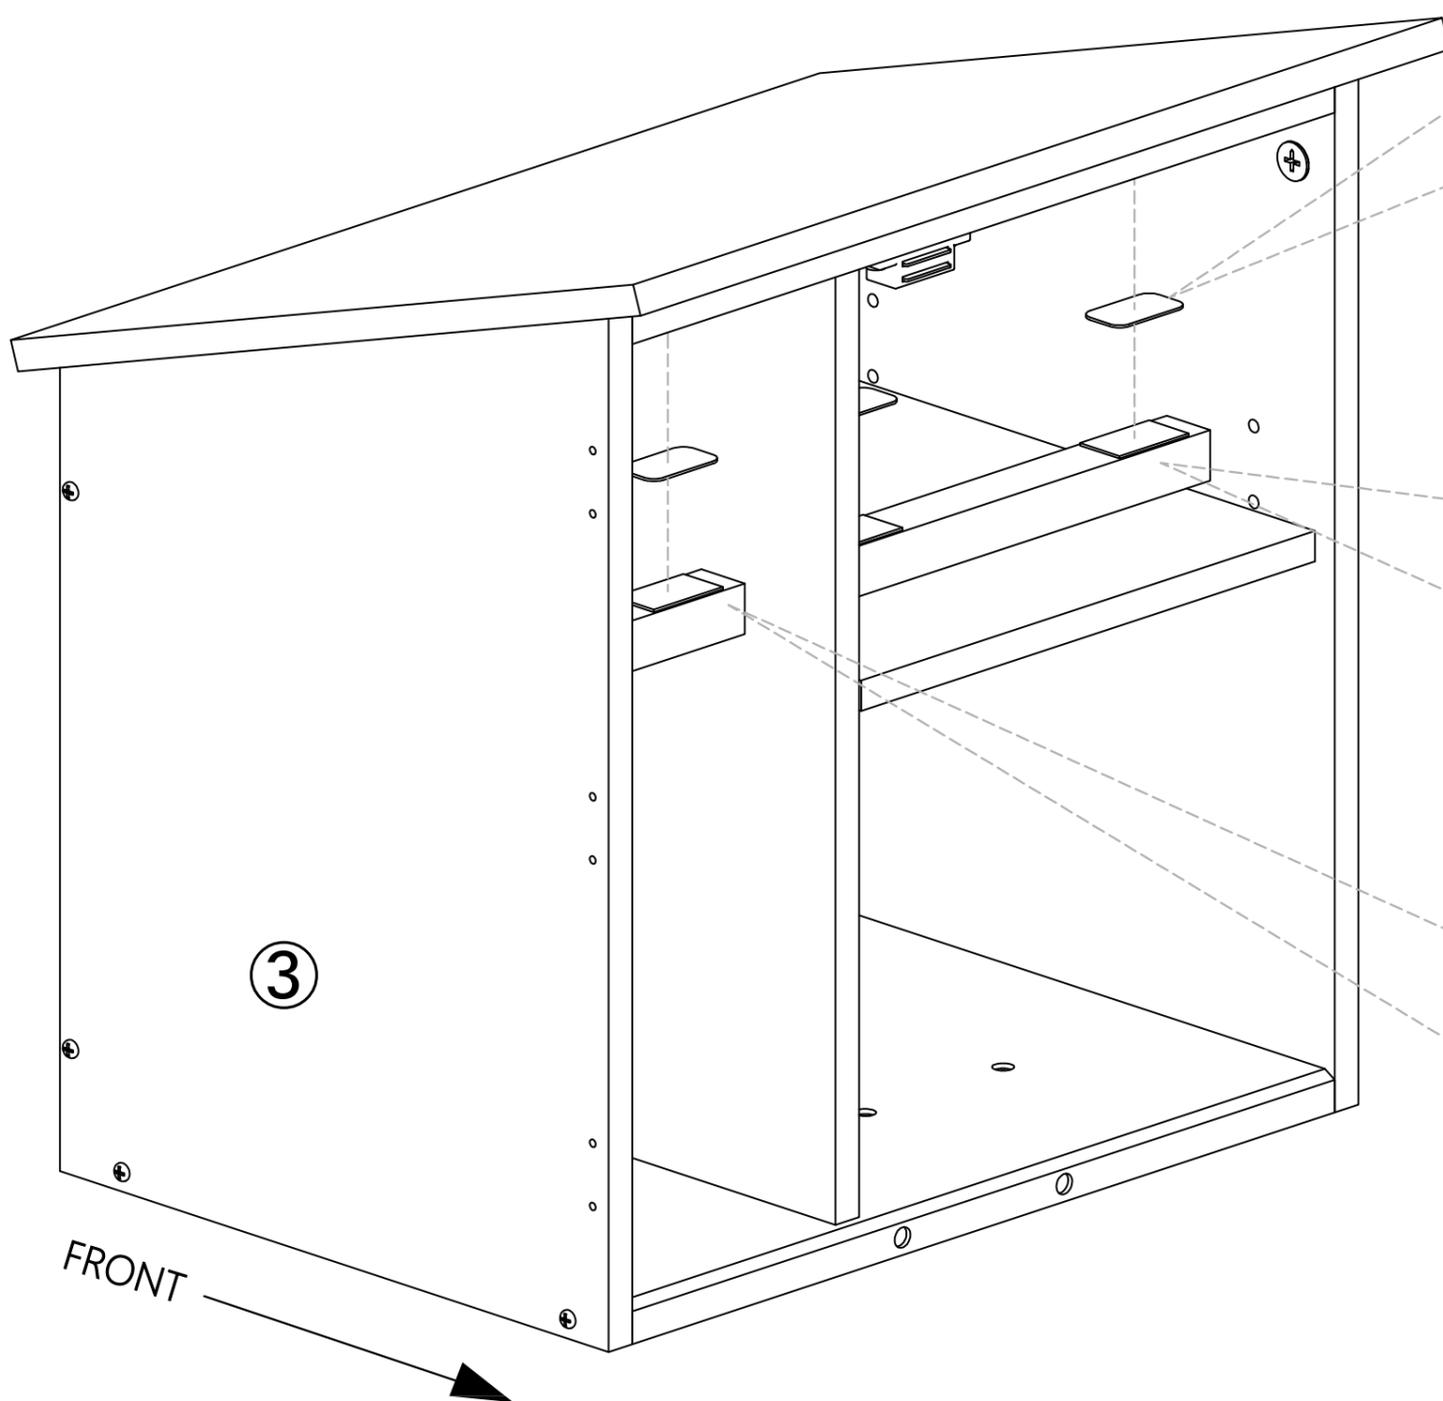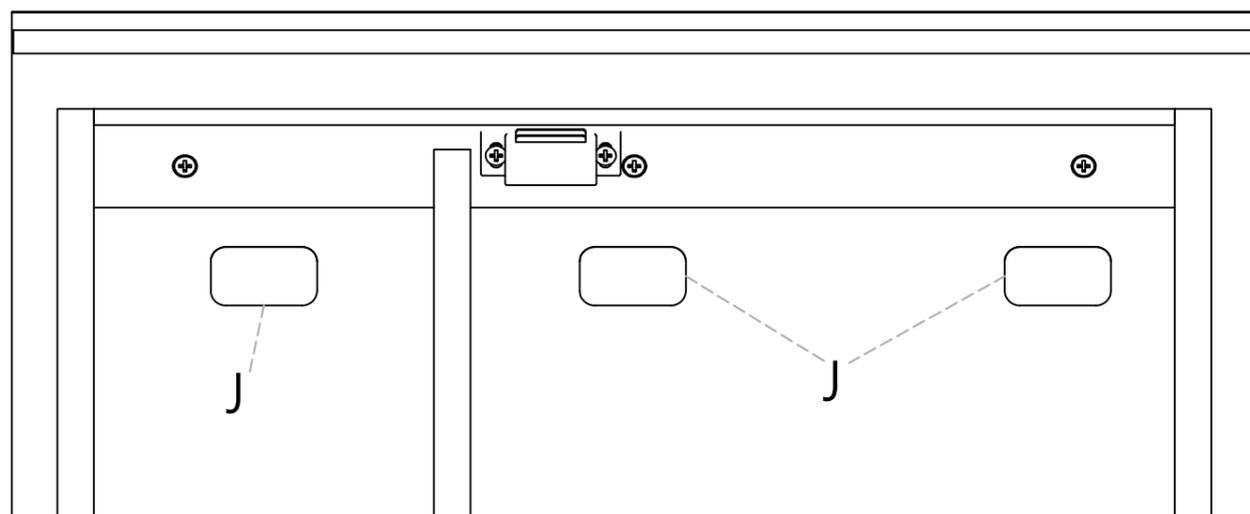

# STEP 11


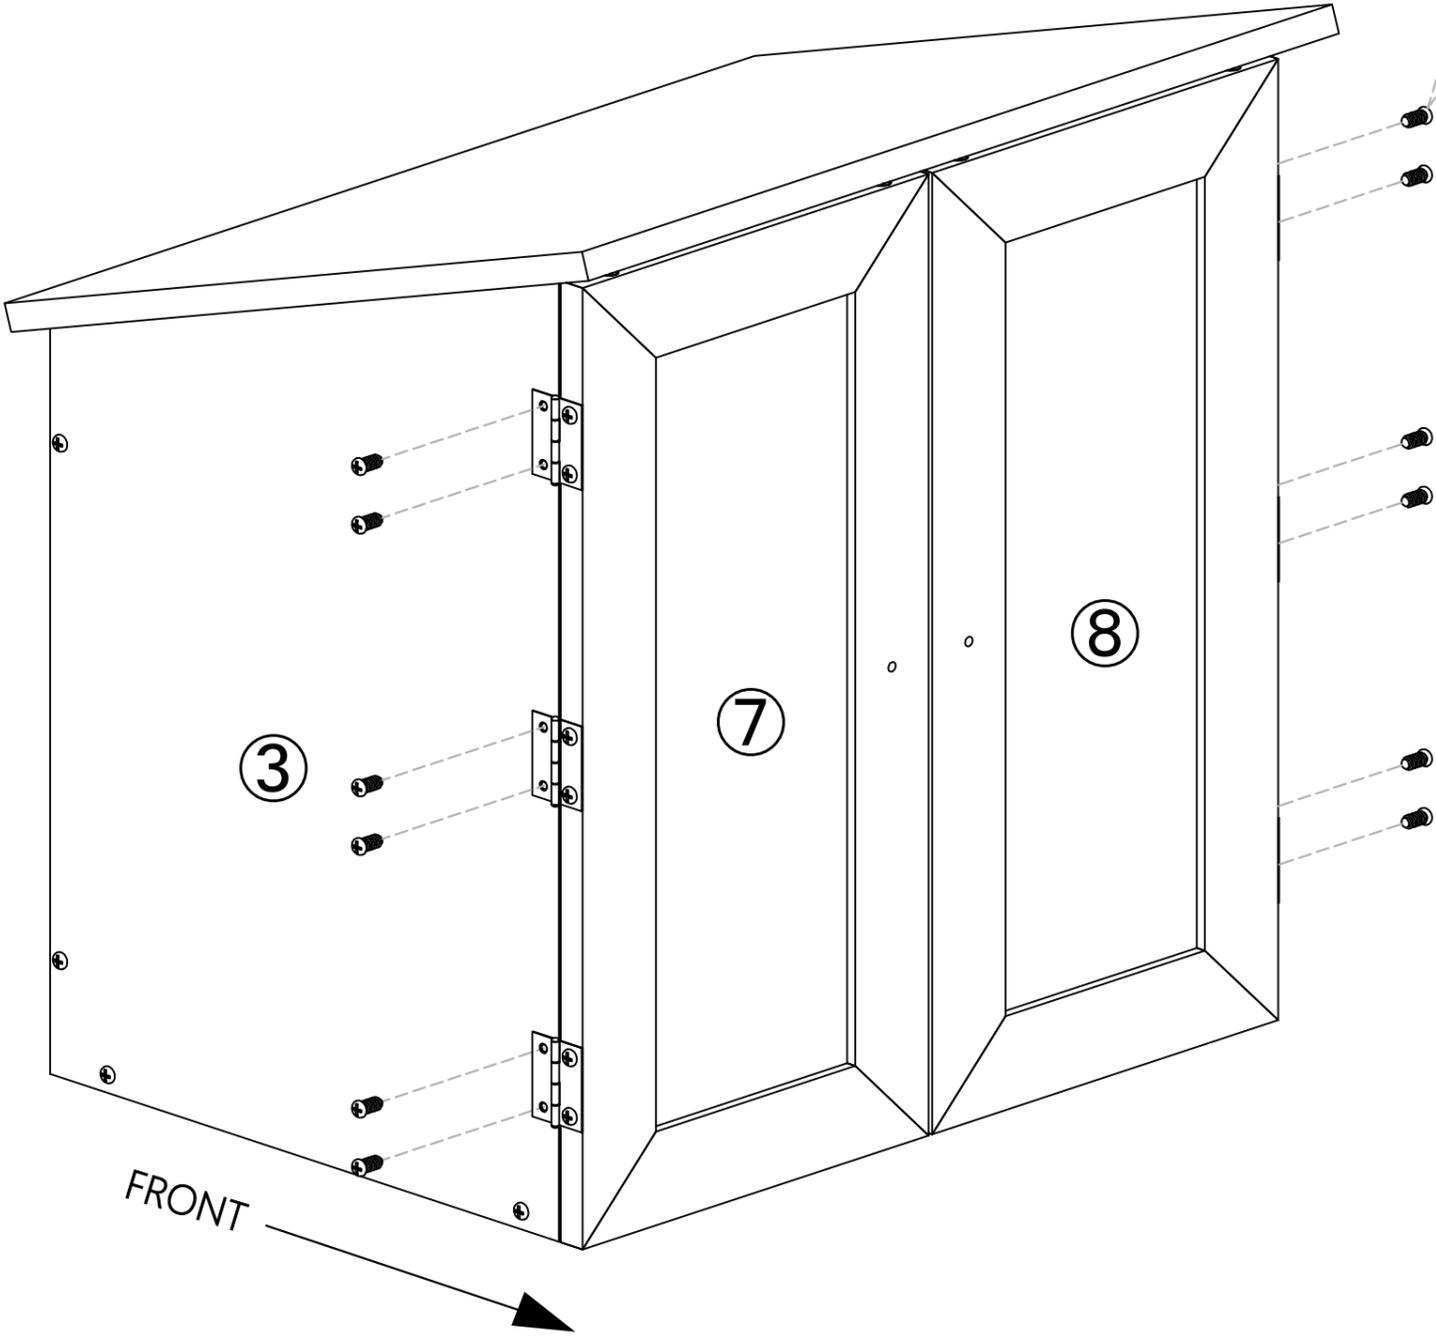
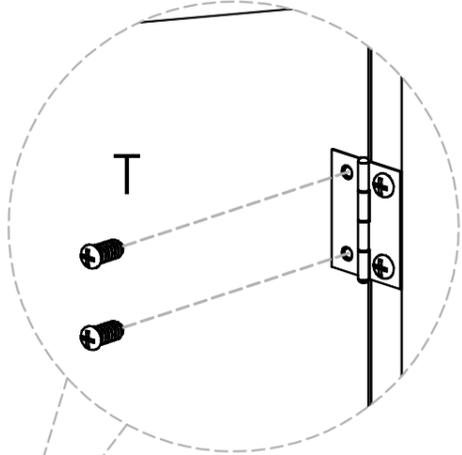
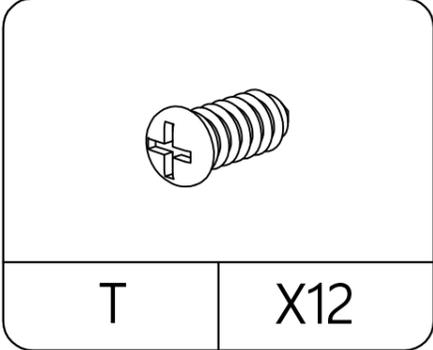


# STEP 12

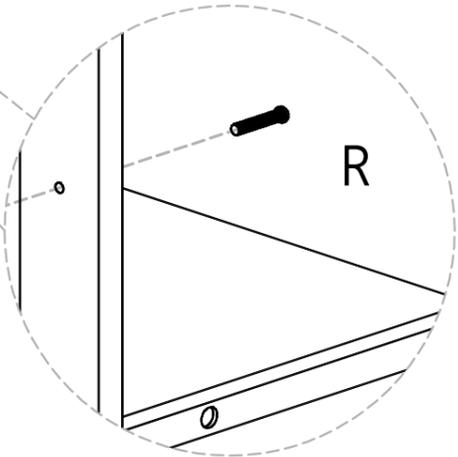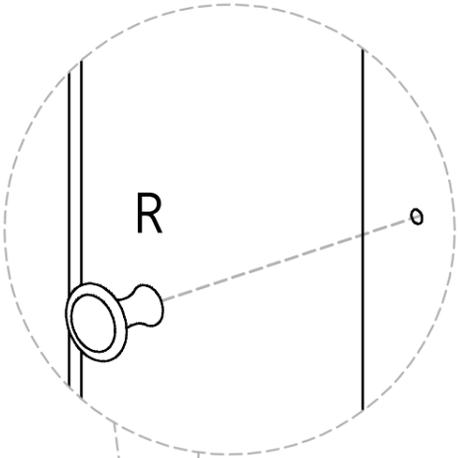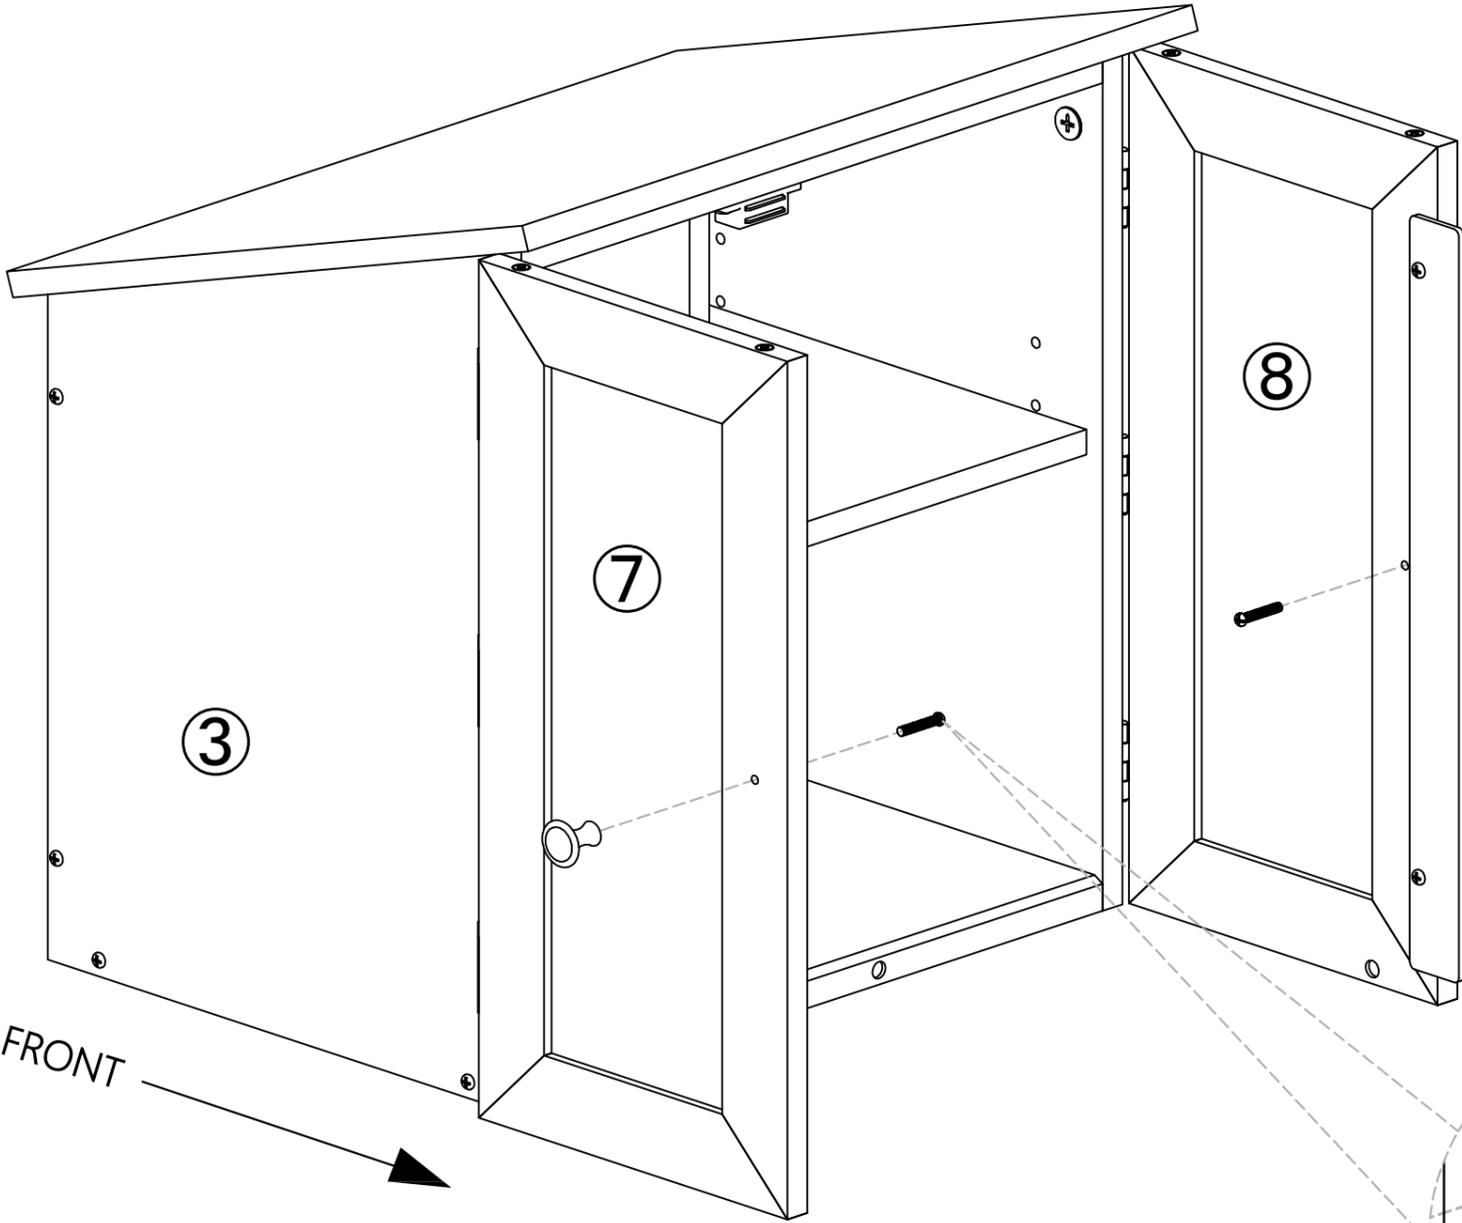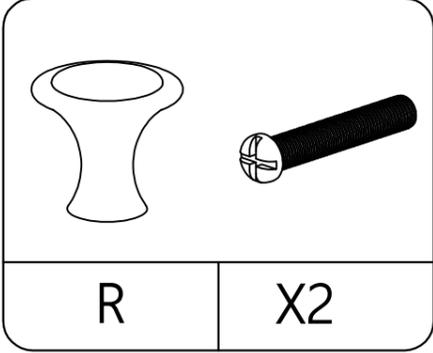








# STEP13

Wall mounted installation

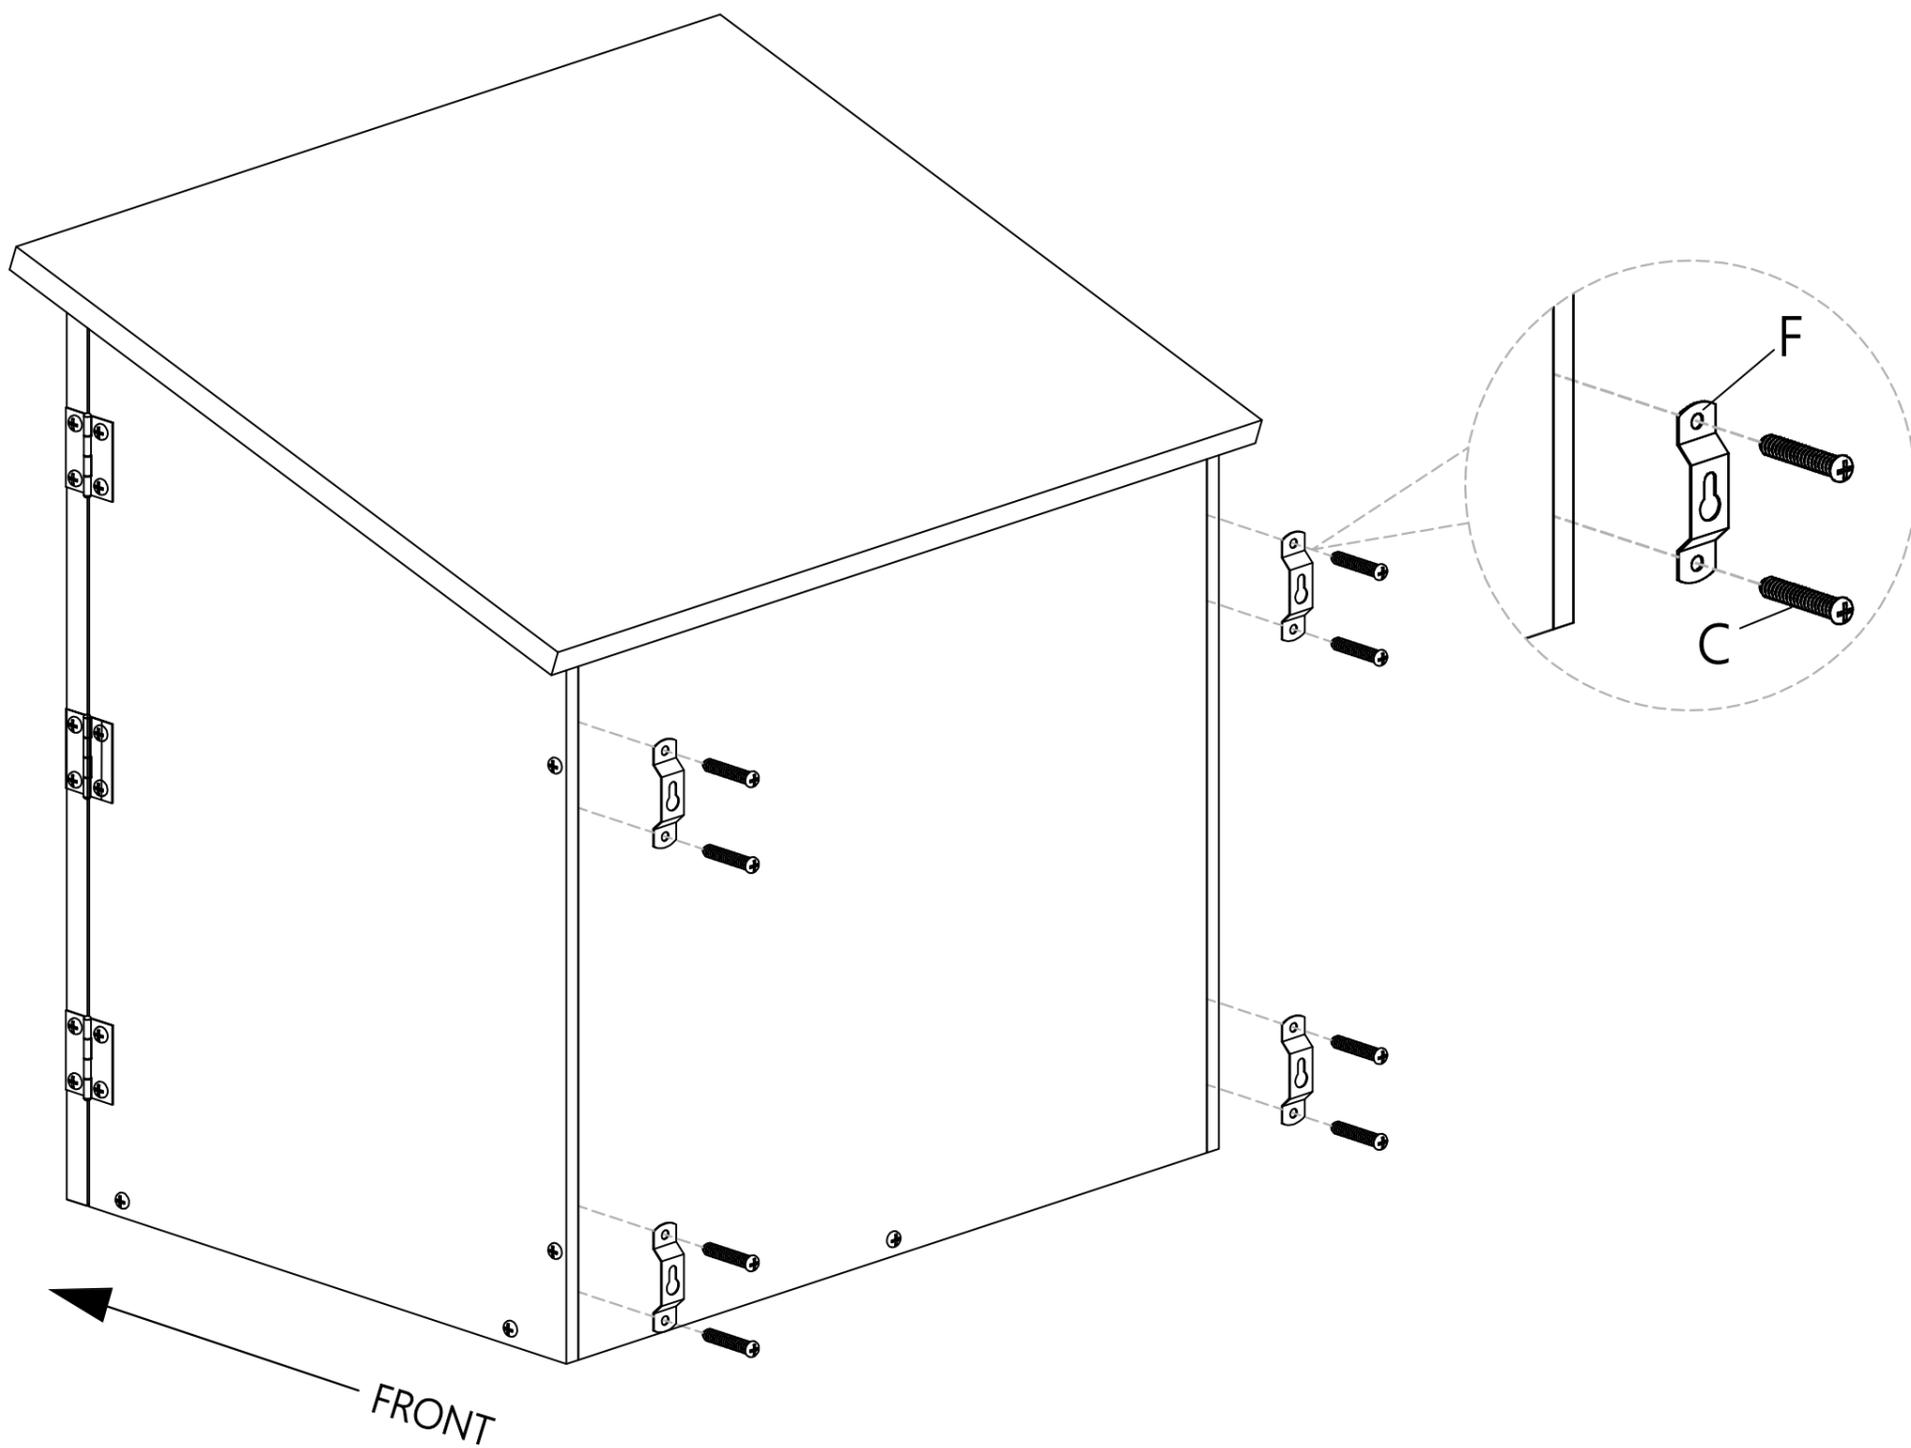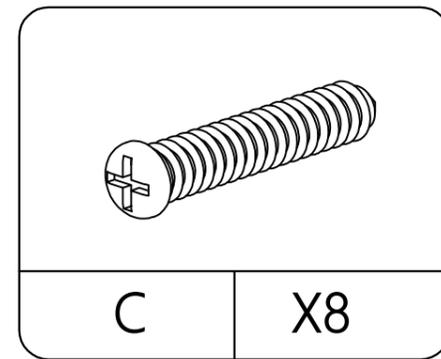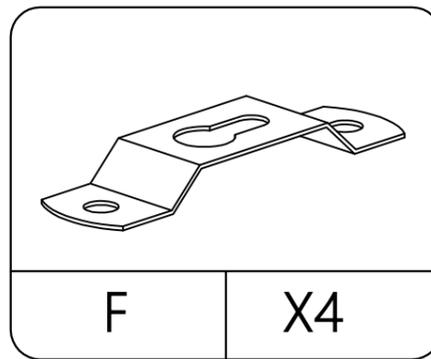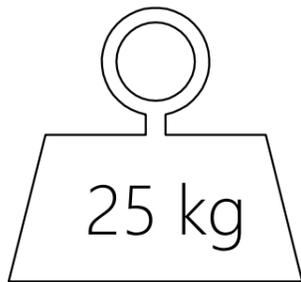

# STEP 14

Wall mounted installation

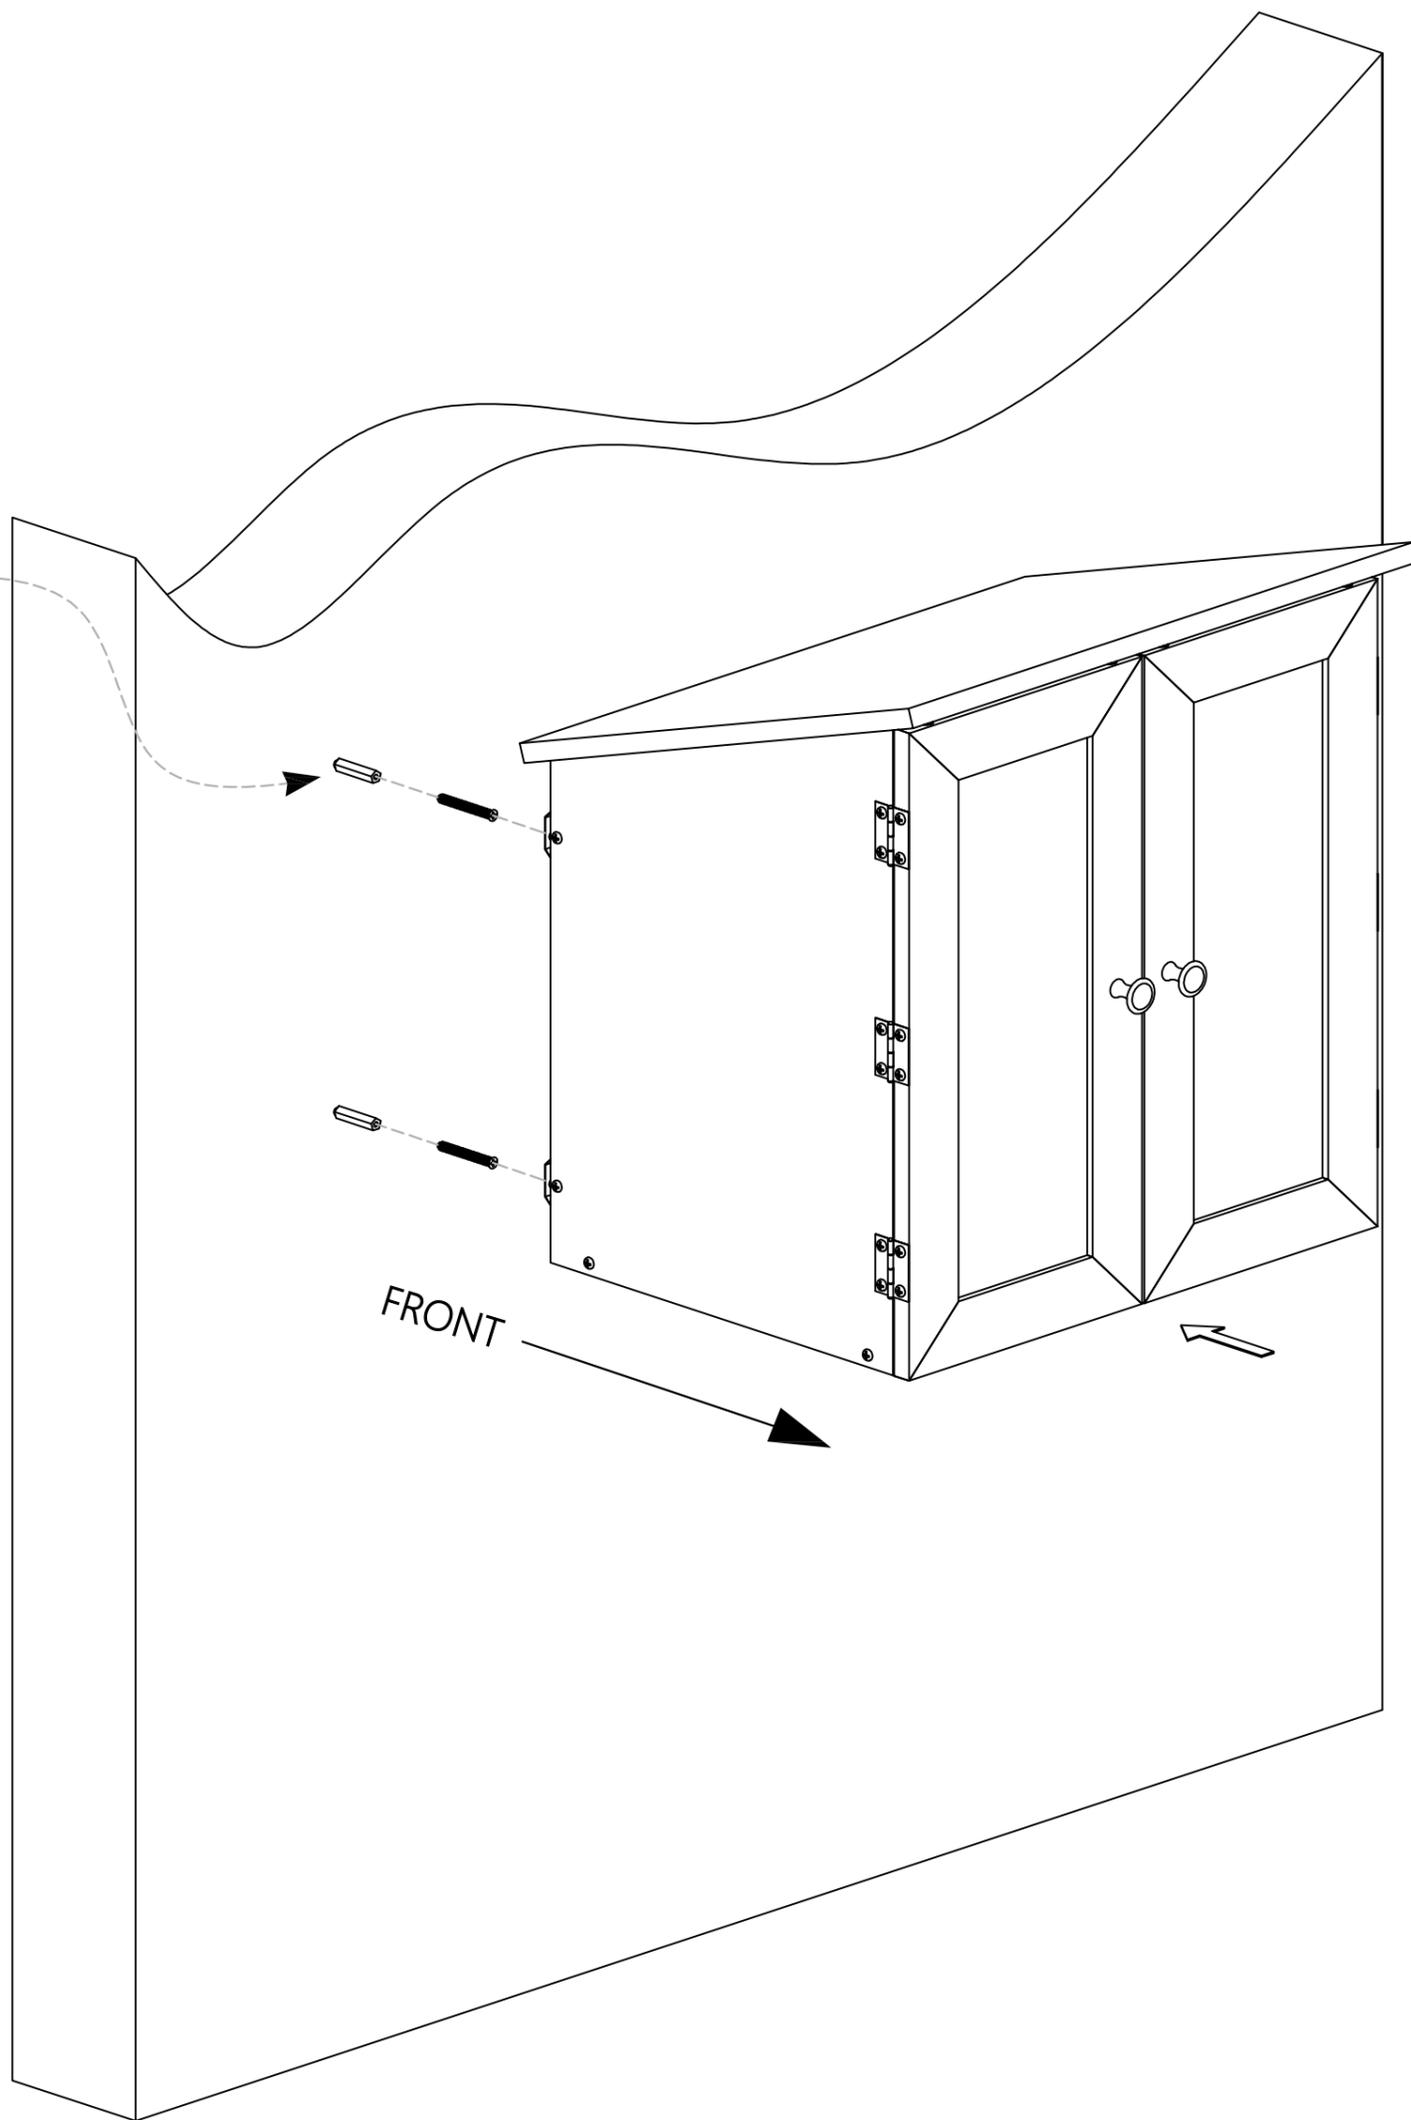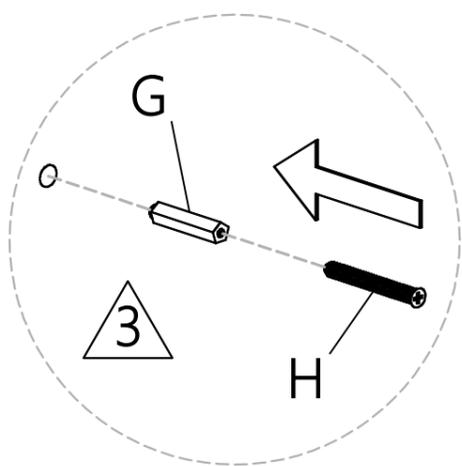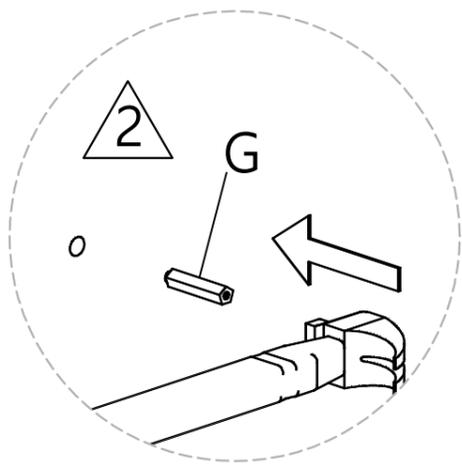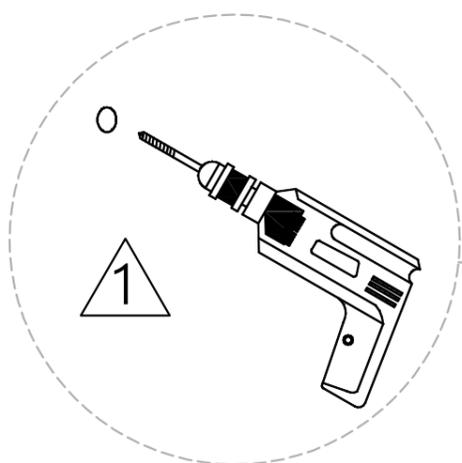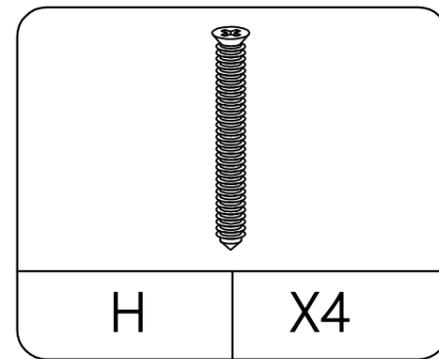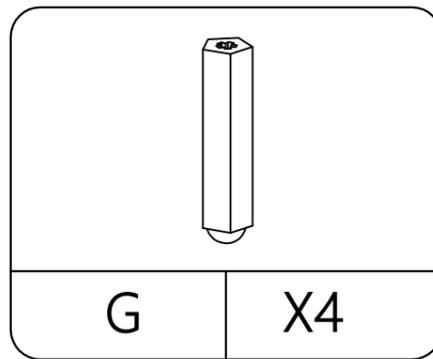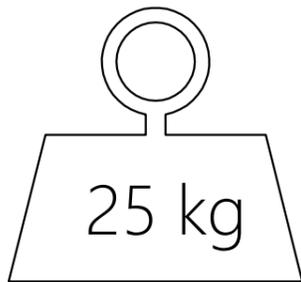

# How to Use the Stamp Set



To ensure the best results with your stamp:

1. Place the ink pad on a flat surface.
2. Tap the stamp lightly on the pad several times. Do not press too hard — gentle, repeated taps work best.
3. Make sure the design is evenly covered.
4. Press on paper with a steady, gentle motion.
5. Lift straight up for a clean print.

*Tip: If the print looks too light, re-ink gently rather than pressing harder.*



*Share the joy of reading*

contact@sylbray.com